

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
10-002001-000	Hex Head Cap Screw (3/8-24 x 2-3/4")	2E-23
10-002003-000	Hex Head Cap Screw (3/8-16 x 7")	10K-11, 12K-4
10-002004-000	Hex Head Cap Screw (3/8-16 x 4")	10K-19, 12K-30
10-002006-000	Hex Head Cap Screw (1/2-20 x 3 1/2")	2E-24
10-002101-001	Hex Head Socket Cap Screw	2L-19
10-009001-001	Hex Socket Head Cap Screw (3/8-24 x 2-1/16")	2E-36, 8E-19
10-050005-000	Eye Bolt	12H-83
10-125002-001	Jam Nut R.H. (5/8-18)	4G-43, 12G-39
10-190019-000	Nylatron Washer	8L-29
10-191550-000	Washer	8B-3, 16B-34
10-191554-000	Flat Washer (11-32)	2L-15
10-191562-000	Washer (25/32)	10A-16, 14A-16
10-193013-000	Washer	26A-38
10-229007-000	X-Washer Pin (1/4 x 1-5/8")	4A-50
10-229451-000	O-Ring Pin	6A-55, 4M-5
10-229453-000	O-Ring Pin	6A-31
10-229509-000	X-Washer Pin	32A-29
10-229510-000	X-Washer Pin	32A-16
10-229601-000	X-Washer Pin	2E-25
10-229602-000	X-Washer Pin	2E-34
10-353001-000	Pin	22A-23
10-376001-000	Spring Wheel	10L-29
10-376007-000	Wheel	4G-13
10-376009-000	Spring Roller	4G-13, 6G-20
10-376010-000	Spring Roller	2A-13, 18A-9, 20A-6, 30A-39
10-385515-000	Spacer	2L-3
10-385529-000	Spacer- Chamfered (13/16 I.D. x 3")	26A-14
10-386068-000	Spacer (1/4 x 3/8")	6A-65
10-386069-000	Spacer (1/2 x 1-1/16")	6A-66
10-386071-000	Spacer (1" X 3-5/16)	2L-6
10-386076-000	Spacer (3/8 x 1-1/32")	10L-78
10-386077-000	Spacer (5/16 x 1-9/32)	10L-18
10-386078-000	Spacer (1/4 x 7/8)	10L-53
10-386080-000	Spacer	10L-66
10-386082-000	Spacer (13/32 x 5/16)	10L-67
10-386089-000	Spacer (11/32 x 1-1/2)	2J-42
10-386091-000	Spacer	10L-46
10-386092-000	Spacer	2E-22
10-386095-000	Spacer (13/32 x 3/8")	18A-21
10-386096-000	Spacer (11/32 x 7/64")	6E-1
10-386115-000	Spacer (7/32 x 3/8)	6E-15
10-386128-000	Spacer	4G-46
10-386239-000	Spacer	8L-31
10-390001-000	Ball Joint Assembly	10L-40
10-421901-000	Flanged Oilite Bearing	8L-1
10-424001-000	Sleeve Oilite Bearing	2E-6, 8E-17
10-427001-000	Bearing 63/64 X 31/64	12K-19
10-427002-000	Snap Ring 47MM	12K-20
10-430001-000	Ball Bearing, w/ Snap Ring	12H-90, 20H-6
10-435501-000	Hex Shoulder Screw - 25/64 X 7/8	10L-70
10-510701-000	Sheave (8")	6L-28
10-510702-000	Sheave (2.3")	6L-29
10-510703-000	Sheave (2.7")	6L-29
10-510704-000	Sheave (9")	6L-28
10-621055-000	Key - 3/16 SQ. X 1 1/8 LG.	6L-27
10-635112-000	Flat Belt	6N-2
10-635113-000	Flat Belt	6N-2
10-635114-000	Flat Belt	6N-2
10-635118-000	Flat Belt	6N-2
10-635124-000	Flat Belt	6N-2
10-635125-000	Flat Belt	6N-2
10-635126-000	Accelerator Belt	6N-3

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
10-635126-600	Accelerator Belt - Special	6N-3
10-635128-000	Flat Belt (Ball Lift)	6N-1
10-635303-000	V-Belt (Motor to Elevator)	2N-2
10-635304-000	V-Belt (Motor to Gear Box)	2N-1
10-635305-000	V-Belt	2N-1
10-635306-000	V-Belt	2N-2
10-635307-000	Belt	6N-4
10-635308-000	V-Belt (Ball Booster)	6N-4
10-635309-000	V-Belt (Cross Conveyor)	2N-6
10-635314-000	V-Belt (Ball Booster)	6N-4
10-635315-000	V-Belt (Motor to Elevator)	18H-43, 2N-3
10-635320-000	V-Belt (Motor to Gear Box)	16A-12, 2N-1
10-635321-000	V-Belt (Motor to Gear Box)	16A-12, 2N-1
10-635323-000	V-Belt	2N-1
10-635326-000	V-Belt (Motor to Gear Box)	2N-1
10-635327-000	V-Belt (Motor to Elevator)	2N-2
10-635328-000	V-Belt (Motor to Elevator Belt)	2N-2
10-635329-000	V-Belt (Motor to Elevator)	2N-2
10-635330-000	V-Belt (Motor to Elevator)	2N-2
10-675001-000	Rubber Mount	2L-44
10-679151-000	Motor Overload Relay	6M-9
10-679157-000	Heater - 4.65 amp	6M-9
10-679158-000	Heater - 5.13 amp	6M-9
10-679159-000	Heater - 5.69 amp	6M-9
10-679160-000	Heater - 6.32 amp	6M-9
10-679161-000	Heater - 6.99 amp	6M-9
10-679163-000	Heater - 8.37 amp	6M-9
10-679164-000	Heater - 9.13 amp	6M-9
10-679165-000	Heater - 9.96 amp	6M-9
10-679166-000	Heater - 10.8 amp	6M-9
10-679167-000	Heater - 11.7 amp	6M-9
10-679168-000	Heater - 12.9 amp	6M-9
10-679169-000	Heater - 14.1 amp	6M-9
10-679170-000	Heater - 15.4 amp	6M-9
10-679171-000	Heater - 16.9 amp	6M-9
10-688003-000	Solenoid, Guardian Type, 208-230V, 60HZ	6A-75, 4M-6
10-688003-003	Solenoid Plunger	6A-78, 4M-4
10-688006-000	Solenoid, Deltrol Type 208-230V, 60 HZ	6A-76
10-688006-000	Solenoid Plunger, Deltrol Type	6A-78
10-688009-000	Solenoid (115V)	6A-77, 4M-6
10-690001-000	Ball Joint Assembly	10L-13
10-700202-000	Terminal Strip	6M-3
10-705043-002	Cooling Fan	4L-28
10-705043-003	Fan Cover	4L-28
10-750619-000	Cable Assembly - 3 COND., 18 AWG, 2' 2"	6L-17
10-750619-001	3-Conductor Service Cord	4L-11
11-001024-001	Hex Head Cap Screw (8-32 x 9/16")	6A-45
11-001062-001	Hex Head Cap Screw (10-24 x 3/4")	4A-36, 8C-35, 2C-31
11-001066-001	Hex Head Cap Screw (10-24 x 1-1/4")	32A-13
11-001068-001	Hex Head Cap Screw (10-24 x 1-1/2")	28A-30, 30A-35
11-001070-001	Hex Head Socket Cap Screw (10-24 x 1-3/4")	28A-29
11-001072-001	Hex Head Cap Screw (10-24 x 2")	6J-16
11-001180-001	Hex Head Cap Screw (1/4 x 5/8")	12D-2, 12H-37, 4P-10
11-001182-001	Hex Head Cap Screw (1/4-20 x 3/4")	22A-2, 24C-9, 16H-10
11-001183-000	Hex Head Socket Cap Screw (1/4-20 x 7/8")	8L-22
11-001183-001	Hex Head Cap Screw (1/4-20 x 7/8")	10C-8, 4H-23, 18H-36
11-001184-001	Hex Head Cap Screw (1/4-20 x 1")	4E-9, 4F-2
11-001185-001	Hex Head Cap Screw (1/4-20 x 1-1/8")	6D-25, 10L-32
11-001186-000	Hex Head Cap Screw(1/4-20 x 1-1/4")	10L-14
11-001186-001	Hex Head Bolt (1/4-20 x 1-1/4")	14B-12, 20B-20, 6D-6, 4E-10, 6J-42
11-001190-001	Hex Head Cap Screw (1/4-20 x 1-3/4")	10C-16, 14C-42, 10L-68
11-001191-001	Hex Head Socket Cap Screw	8G-10

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-001192-000	Hex Head Screw (1/4-20 x 2")	12K-3
11-001195-001	Hex Head Cap Screw (1/4-20 x 2-3/4")	14H-27
11-001196-001	Hex Head Cap Screw (1/4-20 x 3")	6D-24
11-001198-001	Hex Head Cap Screw (1/4-20 x 3-1/2")	6D-5
11-001222-001	Hex Head Socket Cap Screw (1/4-28 x 3/4")	12H-118
11-001260-001	Hex Head Cap Screw (5/16-18 x 5/8")	4C-11, 4J-36
11-001262-000	Hex Head Cap Screw (5/16-18 x 3/4")	30A-18, 38A-13, 18B-18, 12H-111
11-001262-001	Hex Head Cap Screw (5/16-18 x 3/4")	36A-30, 6L-5
11-001263-001	Hex Head Cap Screw (5/16-18 x 7/8")	2H-39, 4L-24, 6L-38
11-001264-001	Hex Head Cap Screw (5/16-18 x 1")	36A-28, 12K-17, 8L-8
11-001265-001	Hex head Cap Screw (5/16-18 x 1-1/8)	6A-54
11-001266-001	Hex Head Cap Screw (5/16-18 x 1-1/4")	28A-36, 2J-24
11-001267-000	Hex Head Socket Cap Screw (5/16-18 x 1-3/8")	8L-39
11-001267-001	Hex Head Cap Screw (5/16-18 x 1-3/8")	6H-8
11-001268-001	Hex Head Cap Screw (5/16-18 x 1-1/2")	2J-40
11-001270-001	Hex Head Cap Screw (5/16-18 x 1-3/4")	2A-32, 14C-37, 12C-39, 2F-13, 4G-33
11-001272-001	Hex Head Cap Screw (5/16-18 x 2")	14D-28, 14H-10, 10L-15
11-001275-001	Hex Head Cap Screw (5/16-18 x 2-3/4")	14H-6
11-001276-001	Hex Head Cap Screw (5/16-18 x 3")	4H-29, 2J-41, 10L-31
11-001286-001	Hex Head Cap Screw (5/16-18 x 5-1/2")	4F-19
11-001304-000	Hex Head Cap Screw (5/16-24 x 1")	6J-49
11-001311-000	Hex Head Socket Cap Screw	8G-37
11-001342-001	Hex Head Cap Screw (3/8-16 x 3/4")	18A-2, 12H-57, 14H-29, 18H-3, 20H-1, 10L-48
11-001343-001	Hex Head Socket Cap Screw	20C-25
11-001344-001	Hex Head Cap Screw (3/8-16 x 1")	28A-1, 12D-6, 2E-31, 12H-61, 16H-6, 10K-35, 12K-13, 14K-19, 2L-22, 10L-49, 2P-18
11-001345-000	Hex Head Cap Screw (3/8-16 x 1-1/8)	6L-36
11-001346-001	Hex Head Cap Screw (3/8-16 x 1-1/4")	2A-31, 2E-41, 12H-119, 2M-20
11-001347-001	Hex Head Cap Screw (3/8-16 x 1-3/8")	18A-20
11-001348-001	Hex Head Cap Screw (3/8-16 x 1-1/2")	2L-57, 6L-34, 8L-15
11-001350-000	Hex Head Cap Screw (3/8-16 x 1-3/4")	10L-71
11-001350-001	Hex Head Socket Cap Screw (3/8-16 x 1-3/4")	8L-15
11-001352-001	Hex Head Socket Cap Screw (3/8-16 x 2")	36A-24, 10G-16, 4K-8
11-001353-001	Hex Head Socket Cap Screw (3/8-16 x 2-1/4")	10G-16, 4K-8
11-001354-001	Hex Head Cap Screw (3/8-16 x 2-1/2")	6E-25, 6G-32, 8H-17, 12H-72, 18H-30
11-001355-000	Hex Head Cap Screw (3/8-16 x 2-3/4")	10L-51
11-001355-001	Hex Head Cap Screw	10L-2
11-001357-001	Hex Head Cap Screw (3/8-16 x 3-1/4")	2F-26, 12H-69, 18H-13
11-001359-001	Hex Head Cap Screw (3/8-16 x 3-3/4")	12H-70, 18H-14
11-001360-001	Hex Head Cap Screw (3/8-16 x 4")	32A-1, 4H-5
11-001376-001	Hex Head Cap Screw (3/8-24 x 3/8")	38A-19
11-001384-001	Hex Head Socket Cap Screw (3/8-24 x 1")	26A-16
11-001390-001	Hex Head Cap Screw (3/8-24 x 1-3/4")	6F-19
11-001393-001	Hex Head Bolt (3/8-24 x 2-1/4")	2F-37
11-001394-001	Hex Head Cap Screw (3/8-24 x 2-1/2")	2E-46
11-001423-001	Hex Head Cap Screw (7/16-14 x 7/8")	6J-38
11-001436-001	Hex Head Socket Cap Screw (7/16-14 x 3")	12H-73
11-001440-001	Hex Head Socket Cap Screw (7/16-14 x 4")	14D-2
11-001474-001	Hex Head Socket Cap Screw (7/16-20 x 2-1/2")	8G-2
11-001506-000	Hex Head Cap Screw (1/2-13 x 1-1/4")	2J-23, 12K-21
11-001506-001	Hex Head Cap Screw (1/2-13 x 1-1/4")	2F-39
11-001508-001	Hex Head Cap Screw (1/2-13 x 1-1/2")	2E-37, F10-2
11-001510-001	Hex Head Socket Cap Screw (1/2-13 x 1-3/4")	2J-31
11-001512-000	Hex Head Socket Cap Screw (1/2-13 x 2")	10G-16, 4K-8
11-001515-000	Hex Head Socket Cap Screw (1/2-13 x 2-3/4")	36A-27, 4H-49, 12H-63
11-001517-001	Hex Head Socket Cap Screw (1/2-13 x 3-1/4")	28A-23, 30A-5, 18B-5, 4H-49, 12H-63, 2P-19
11-001518-001	Hex Head Cap Screw (1/2-13 x 3-1/2")	2K-16, 6K-30
11-001522-001	Hex Head Socket Cap Screw (1/2-13 x 4-1/2")	4H-39
11-001531-001	Hex Head Socket Cap Screw (1/2-13 x 10-1/2")	4H-54, 12H-117, 2P-20

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-001544-001	Hex Head Socket Cap Screw (1/2-20 x 1")	4E-28
11-001664-001	Hex Head Socket Cap Screw	28A-35
11-001690-000	Hex Head Socket Cap Screw	2L-1
11-001909-001	Hex Head Socket Cap Screw (5/16-18 x 1")	34A-22
11-001950-001	Hex Head Socket Cap Screw (3/8-16 x 1-1/2")	8L-25
11-002001-000	Hex Head Socket Cap Screw (1/4-20 x 5/8")	2L-38
11-002001-001	Hex Head Socket Cap Screw (1/4-20 x 5/8")	22C-9, 12H-64
11-002004-001	Hex Head Cap Screw (1/4-20 x 1")	10B-17, 20C-35, 12H-66, 20H-11
11-002006-001	Hex Head Cap Screw (1/4-20 x 1-1/2")	14C-27, 12C-29, 4C-12
11-002008-001	Hex Head Socket Cap Screw (1/4-20 x 2")	8C-20, 2G-32, 6G-36
11-002035-001	Hex Head Socket Cap Screw (1/4-28 x 1-1/4")	14C-49
11-002068-001	Hex Head Socket Cap Screw (5/16-18 x 2")	4G-35
11-002072-001	Hex Head Socket Cap Screw (5/16-18 x 3")	4G-47
11-002075-001	Hex Head Socket Cap Screw (5/16-18 x 3-3/4")	6G-37
11-002092-001	Hex Head Socket Cap Screw (5/16-24 x 3/4")	2L-13
11-002094-001	Hex Head Socket Cap Screw (5/16-24 x 1")	6E-4
11-002124-001	Hex Head Socket Cap Screw (3/8-16 x 1")	10G-26, 2K-24, 4K-29
11-002125-001	Hex Head Socket Cap Screw (3/8-16 x 1-1/4")	26A-28
11-002126-001	Hex Head Socket Cap Screw (3/8-16 x 1-1/2")	4H-24
11-002128-001	Hex Head Socket Cap Screw (3/8-16 x 2")	2L-32
11-002129-001	Hex Head Cap Screw (3/8-16 x 2-1/4")	2L-31, 4L-1
11-002132-001	Hex Head Socket Cap Screw (3/8-16 x 3")	2L-33
11-002155-000	Hex Head Socket Cap Screw (3/8-24 x 1-1/4")	8G-25
11-002247-000	Hex Head Socket Cap Screw (1/2-13 x 1-3/4")	12H-67
11-002252-000	Hex Head Cap Screw (1/2-13 x 3")	2K-4, 6K-18
11-002260-001	Hex Head Socket Cap Screw (1/2-13 x 5-1/2")	14K-8
11-002365-001	Hex Head Cap Screw (5/8-11 x 1-1/4")	26A-24, 10G-25, 2K-21, 4K-22, 10K-21
11-002383-000	Hex Head Socket Cap Screw (5/8-11 x 7")	14D-37
11-002389-000	Hex Head Socket Cap Screw (5/8-11 x 7-1/2")	14D-38
11-003182-000	Hex Socket Cap Screw	10D-25, 12D-24
11-004714-001	Hex Head Socket Cap Screw (5/8-18 x 2-1/2")	8H-9
11-005086-001	Hex Head Socket Cap Screw (10-24 x 3/8")	6C-39
11-005092-001	Hex Head Socket Cap Screw (10-24 x 3/4")	2A-5
11-005093-001	Hex Head Socket Cap Screw (10-24 x 7/8")	4B-2, 8K-5
11-005094-000	Hex Head Socket Cap Screw (10-24 x 1")	8G-20
11-005118-001	Hex Head Socket Cap Screw (10-32 x 1/2")	14C-53
11-005120-001	Hex Head Socket Cap Screw (10-32 x 5/8")	4A-4, 6A-64
11-005178-001	Hex Head Socket Cap Screw (1/4-20 x 1/2")	6C-20, 14C-48
11-005180-001	Hex Head Socket Cap Screw (1/4-20 x 5/8")	2H-16, 14K-26
11-005182-001	Hex Head Socket Cap Screw (1/4-20 x 3/4")	24A-34, 8D-21, 8K-17
11-005183-001	Hex Head Socket Cap Screw (1/4-20 x 7/8")	2H-16, 12H-65, 20H-28, 2J-33
11-005184-001	Socket Head Cap Screw (1/4-20 x 1")	16K-8
11-005184-011	Hex Socket Head Cap Screw with Dri-Lok	4F-12
11-005190-001	Hex Head Socket Cap Screw	14D-13
11-005196-001	Socket Head Cap Screw (1/4-20 x 3")	2C-43
11-005263-001	Hex Head Socket Cap Screw (5/16-18 x 7/8")	2A-4, 10A-24, 24A-15, 30A-17, 34A-27, 18B-17
11-005264-001	Hex Head Socket Cap Screw (5/16-18 x 1")	10G-24, 2K-23, 4K-27, 16K-7
11-005266-001	Hex Head Socket Cap Screw (5/16-18 x 1-1/4")	2A-36, 18A-15
11-005268-000	Cap Screw Hex Socket (5/16-18 x 1-1/2")	2A-29
11-005274-001	Hex Socket Head Cap Screw (5/16-18 x 2-1/2")	32A-12
11-005278-001	Hex Socket Head Cap Screw (5/16-18 x 3-1/2")	32A-8
11-005304-001	Hex Head Socket Cap Screw (5/16-24 x 1")	10G-1, 4K-17
11-005343-001	Cap Screw	6J-2
11-005348-001	Hex Head Socket Cap Screw (3/8-16 x 1-1/2")	2K-9, 6K-23
11-005354-001	Hex Head Socket Cap Screw (3/8-16 x 2-1/2")	6C-5, 12C-5, 4C-27, 4E-42
11-005356-001	Hex Head Socket Cap Screw (3/8-16 x 3")	6C-3, 12C-3
11-005357-001	Hex Head Socket Cap Screw (3/8-16 x 3-1/4")	4C-15
11-005360-001	Hex Head Socket Cap Screw (3/8-16 x 4")	6C-4, 12C-4
11-005474-001	Hex Head Socket Cap Screw (7/16-20 x 2-1/2")	18A-28
11-005514-000	Hex Head Socket Cap Screw (1/2-13 x 2-1/2")	2E-44
11-005515-001	Hex Head Screw	8H-30

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-005553-001	Hex Head Socket Cap Screw (1/2-20 x 2-1/4")	8E-4
11-006088-001	Button Head Socket Cap Screw (10-24 x 1/2")	12C-20, 4C-30
11-006180-001	Button Head Socket Cap Screw (1/4-20 x 5/8")	8D-50
11-006182-001	Button Head Socket Cap Screw (1/4-20 x 3/4")	8D-44
11-006184-001	Button Head Socket Cap Screw (1/4-20 x 1")	4J-48
11-006185-001	Button Head Socket Cap Screw (1/4-20 x 1-1/8")	20C-21
11-006186-001	Button Head Socket Cap Screw (1/4-20 x 1-1/4")	8D-47
11-006188-001	Button Head Socket Cap Screw (1/4-20 x 1-1/2")	8D-45
11-006218-000	Button Head Socket Cap Screw (1/4-28 x 1/2")	8D-42
11-006345-000	Button Head Socket Cap Screw (3/8-16 x 1")	8E-12
11-006504-001	Button Head Socket Cap Screw (1/2-13 x 1")	12H-120
11-007061-001	Flat Head Hex Socket Cap Screw (8-32 x 3/8")	24A-35
11-007085-001	Flat Allen Head Cap Screw	6A-53
11-007086-001	Flat Head Socket Cap Screw (10-24 x 3/8")	8G-16
11-007090-001	Flat Head Socket Cap Screw (10-24 x 5/8")	14A-24, 8C-15, 2C-15, 6J-50
11-007092-001	Flat Head Socket Cap Screw (10-24 x 3/4")	10F-8
11-007094-000	Flat Head Socket Cap Screw (10-24 x 1")	6C-25
11-007180-001	Flat Head Socket Cap Screw (1/4-20 x 5/8")	8D-51, 12D-8, 10H-1, 4P-19
11-007182-000	Flat Head Socket Cap Screw (1/4-20 x 3/4")	2L-45
11-007182-001	Flat Head Socket Cap Screw (1/4-20 x 3/4")	24A-30, 26A-34, 12C-16, 8D-1
11-007184-001	Flat Head Socket Cap Screw (1/4-20 x 1")	24A-38, 26A-33
11-007186-001	Flat Head Socket Cap Screw (1/4-20 x 1-1/4")	6D-6, 8D-48, 12H-34
11-007188-001	Flat Head Hex Socket Cap Screw (1/4-20 x 1 1/2"), for machines with finishing washers	8D-49
11-007190-001	Flat Head Socket Cap Screw (1/4-20 x 1-3/4")	30A-24, 18B-24
11-007195-001	Flat Head Socket Cap Screw (1/4-20 x 2-3/4")	6D-21, 14D-34
11-007197-001	Flat Head Socket Cap Screw (1/4-20 x 3-1/4")	6D-5, 14D-36
11-007198-001	Flat Head Socket Cap Screw (1/4-20 x 3-1/2")	8D-55, 10D-30
11-007200-001	Flat Head Socket Cap Screw (1/4-20 x 4")	8D-57, 10D-32
11-007203-001	Flat Head Socket Cap Screw (1/4-20 x 4-3/4")	14D-9
11-007216-001	Flat Head Socket Cap Screw (1/4-28 x 3/8")	8D-43
11-007264-001	Flat Head Socket Cap Screw (5/16-18 x 1")	2A-4, 10A-25, 24A-33, 38A-3, 6H-2
11-007300-001	Flat Head Socket Cap Screw (5/16-24 x 5/8")	8E-3
11-007344-000	Flat Head Socket Cap Screw (3/8-16 x 1")	36A-19
11-007344-001	Flat Head Socket Cap Screw (3/8-16 x 1")	24A-1, 8H-2
11-007346-001	Flat Head Socket Cap Screw (3/8-16 x 1-1/4")	26A-21, 34A-28
11-007348-000	Flat Head Socket Cap Screw (3/8-16 x 1-1/2")	6L-35
11-007348-001	Flat Head Socket Cap Screw (3/8-16 x 1-1/2")	18A-5, 4J-1
11-007352-001	Flat Head Socket Cap Screw (3/8-16 x 2")	6D-12
11-007384-001	Flat Head Socket Cap Screw (3/8-24 x 1")	26A-39
11-007386-001	Flat Head Socket Cap Screw (3/8-24 x 1-1/4")	2G-40, 8G-25
11-007388-001	Flat Head Socket Cap Screw (3/8-24 x 1-1/2")	4G-44
11-007504-000	Hex Head Socket Cap Screw (1/2-13 x 1")	2J-34
11-007676-001	Flat Head Socket Cap Screw (5/8-11 x 3")	2K-6, 6K-20
11-007712-001	Flat Head Socket Cap Screw (5/8-18 x 2")	10K-2
11-008088-001	Flat Head Socket Cap Screw (10-24 x 3/4")	36A-4
11-008189-000	Cap Screw - F. Hd. Soc.	10L-55
11-010062-001	Hex Head Slotted Cap Screw (8-32 x 5/8")	6A-73
11-010094-001	Hex Head Slotted Machine Screw (10-32 x 3/8")	6A-69
11-010097-001	Hex Head Slotted Machine Screw (10-32 x 9/16")	6A-70
11-010132-001	Hex Head Slotted Machine Screw (1/4-20 x 1/2")	18A-30
11-010139-001	Hex Head Slotted Machine Screw (1/4-20 x 1-1/4")	8A-20
11-012563-001	Pan Head Socket Cap Screw & External Lockwasher	2M-6
11-013020-000	Pan Head Slotted Machine Screw (6-32 x 1/4")	10L-73
11-014090-009	Flat Head Socket Cap Screw	8F-4
11-015163-001	Hex Head Socket Cap Screw w/ External Tooth Lockwasher	
11-015165-001	Hex Head Socket Cap Screw (10-24 x 5/8")	10B-22, 6D-7
11-015285-001	Hex Head Socket Cap Screw & External Tooth Lockwasher	
11-015287-001	Hex Head Socket Cap Screw (1/4-20 x 3/4")	34A-25
11-015367-001	Hex Head Socket Cap Screw (5/16-18 x 3/4")	30A-8, 18B-8
11-015377-001	Hex Head Bolt and Lockwasher Assembly	10B-27
11-017163-001 (10-24 x 1/2")	Round Head Cross Res. W/ Ext. Tooth Lockwasher	28A-25, 10B-5
		2C-15
		16K-9

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-017177-001	Round Head Cross Res. W/ Ext. Tooth Lockwasher (10-24 x 2")	10B-1, 20B-34
11-017287-001	Round Head Cap Screw with Washer	2P-11
11-017564-001	Round Head Slotted Cap Screw	4L-10, 6L-23
11-018087-001	Screw with Lock Washer Assembly (10-24 x 5/8"), for S/N 67499 and below	6D-7
11-020287-000	Truss Head Socket Cap Screw	12D-23
11-030004-001	Pipe Plug (1/2-14 x .582 Max.)	24A-13, 34A-14
11-030505-000	Magnetic Plug (3/4-14 x .815)	22A-8
11-042095-001	Round Head Slotted Wood Screw (#10 x 1")	16H-21, 2P-28
11-050006-000	Woodruff Key	6L-13
11-070062-001	Lag Screw	4P-17
11-071587-001	Heat Treated Special Bolt (1/2-13 x 2")	10K-24
11-072021-001	Step Bolt	4P-21
11-078034-001	Round Head Socket Cap Screw (3/8-16 x 1")	4L-2
11-081007-001	Hex Washer Self Tapping Screw (1/4 x 3/8")	4L-5, 6L-21
11-081017-001	Hex Washer Self Tapping Screw (10-24 x 5/8")	32A-18
11-100588-000	Headless Socket Set Screw	10B-32
11-100915-001	Headless Socket Set Screw (5/8-18 x 1-1/2")	14B-2
11-101164-001	Set Screw (1/4-20 x 1/2")	16A-10
11-101208-001	Set Screw (5/16-18 x 3/4")	6L-9
11-102215-000	Headless Socket Set Screw	14H-15
11-102220-000	Headless Socket Set Screw	2F-16
11-102259-001	Headless Socket Set Screw (3/8-16 x 2")	2L-35
11-102262-001	Set Screw (3/8-16 x 2-3/4")	2H-29
11-103253-001	Headless Set Screw (3/8-16 x 1-1/4")	2K-14, 6K-28
11-103295-001	Set Screw (7/16-14 x 1-1/2")	10K-26
11-105160-001	Set Screw (1/4-20 x 1/4)	20C-29
11-105200-001	Set Screw - Headless (5/16-18 x 1/4")	12H-10, 18H-7
11-105201-001	Headless Set Screw (5/16-18 x 5/16")	12H-54
11-105208-001	Set Screw	2H-10
11-105582-001	Headless Set Screw (10-32 x 3/8")	14K-11
11-106504-001	Stripper Hex Head Socket Cap Screw (10-24 x 1")	4A-33, 6A-58, 30A-27, 38A-37, 14B-15, 18B-27, 20B-18, 8C-24, 10C-17, 14C-41, 14C-7, 18C-39, 20C-35, 6D-17, 10D-26, 12D-22, 14D-32, 4E-12, 12H-35, 14H-17, 2J-37, 4J-24, 6J-41, 2L-56, 2M-16, 4M-12, 2P-12, 4P-9
11-106525-000	Hex Head Socket Cap Screw (5/16 x 3/8 1/4-20)	10C-11
11-106563-000	Stripper Bolt	12H-71
11-107024-001	Screw	4L-16
11-107033-001	Round Head Machine Screw, for machines prior to S/N 1593	10B-35
11-107036-000	Round Head Machine Screw, for machines prior to S/N 1593	10B-34
11-107068-000	Machine Screw - R. Hd. (8-32 x 3/4")	10L-41
11-107148-001	Machine Screw-R.H. (1/4-20 x 3/4")	2M-14
11-110130-001	Hex Head Cap Screw (1/4-20 x 3/4")	6C-31, 2C-34, 2F-33, 4F-24
11-121519-001	Hex Nut	14A-17, 2E-15
11-121522-000	Nut	2E-42
11-121523-000	Hex Nut w. Nylon Cap	2E-11
11-125003-001	Hex Nut (#8-32)	6A-67, 20B-31, 2M-8
11-125004-001	Hex Nut (#10-24)	4A-32, 28A-26, 8C-26, 6C-24, 2C-28, 10f-7, 6J-15, 8K-10
11-125005-001	Hex Nut (#10-32)	4A-28, 10B-31, 6E-14
11-125006-001	Hex Nut (12-24)	4J-45
11-125007-001	Hex Nut (1/4-20)	8A-21, 8K-2, 2M-15
11-125009-001	Hex Nut (5/16-18)	6A-51, 4H-31, 16H-28, 2L-42
11-125011-001	Hex Nut (3/8-16)	2K-10, 6K-24

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-125100-001	Hex Nut (1/4-20)	14B-13, 20B-16, 8C-22, 10C-13, 14C-39, 20C-28, 24C-12, 2C-41, 12C-40, 4C-23, 6D-18, 8D-54, 14D-33, 4F-26, 8G-36, 12H-74, 14H-31, 16H-12, 18H-32, 2J-35, 6J-46, 12K-1, 4P-12
11-125101-001	Hex Nut (1/4-28)	8A-23, 20C-22, 12C-23, 4C-5, 14D-48
11-125102-000	Hex Nut (5/16-18")	2A-38, 38A-10, 4G-37, 12H-58, 2J-21, 4J-39, 6J-33, 12K-28, 10L-63
11-125102-001	Hex Nut (5/16-18)	36A-31, 14C-34, 12C-37, 4F-28, 4H-16, 8H-21, 14H-8, 18H-8
11-125103-001	Hex Nut (5/16-24)	20A-10, 4E-20
11-125104-001	Hex Nut (3/8-16)	2A-41, 18A-27, 26A-7, 36A-21, 6C-6, 12C-22, 4C-29, 6D-19, 14D-22, 2F-32, 8G-26, 4H-16, 8H-21, 12H-60, 16H-8, 18H-
8, 10L-6, 2M-22		
11-125106-001	Hex Nut (7/16-14)	6C-33, 4H-14, 8H-16, 12H-75, 18H-21, 4J-43, 6J-37
11-125107-001	Hex Nut (7/16-20)	18A-23, 8G-31
11-125108-001	Hex Nut (1/2-13)	28A-32, 30A-2, 36A-25, 18B-2, 4H-48, 12H-76, 2J-36, 2K-2, 6K-16, 10K-28, 2P-17, 4P-15
11-125109-001	Hex Nut (1/2-20)	2F-2
11-125115-001	Hex Nut (3/4-16)	10A-17
11-125200-001	Hex Jam Nut (1/4-20)	6A-39, 36A-32, 38A-30, 2G-38, 12G-9
11-125201-001	Hex Jam Nut (1/4-28)	8A-5, 4B-9
11-125202-000	Hex Jam Nut (5/16-18)	2L-48
11-125202-001	Hex Jam Nut (5/16-18)	10B-26, 4E-16, 2F-17, 12H-84
11-125203-001	Hex Jam Nut (5/16-24)	20A-11, 24A-25, 30A-11, 18B-11, 12H-98
11-125204-001	Hex Jam Nut (3/8-16)	2C-21, 4E-27, 6G-41, 12G-6, 2H-28, 4J-7, 2L-34
11-125206-001	Hex Jam Nut (7/16-14)	6C-34, 2G-9, 12G-17
11-125207-001	Hex Jam Nut (7/16-20)	12G-22
11-125208-001	Hex Jam Nut (1/2-13)	26A-9, 2H-1
11-125209-001	Hex Jam Nut (1/2-20)	10D-7, 4E-25, 6E-22, 6G-31, 12G-33
11-125211-000	Hex Jam Nut (9/16-18)	12K-11
11-125213-001	Hex Jam Nut (5/8-18)	14B-1
11-125221-001	Hex Jam Nut (1-1/8 x 12)	8G-34
11-125250-001	Hex Jam Nut (1/4-20)	2G-39, 12G-11
11-125253-001	Hex Jam Nut (5/16-24)	10L-10
11-125254-001	Hex Jam Nut (3/8-16)	6G-40, 12G-2
11-125256-001	Hex Jam Nut (7/16-14)	2G-11, 12G-14
11-125257-000	Hex Jam Nut (7/16-20)	12G-19
11-125259-001	Hex Jam Nut (1/2-20)	10D-5, 2E-13, 6E-27, 6G-33, 12G-35
11-125261-000	Hex Jam Nut (9/16-18)	12K-12
11-125263-001	Hex Jam Nut (5/8-18)	4G-42, 12G-37
11-125265-001	Hex Jam Nut (3/4-16)	16C-23, 18C-9
11-131510-001	Flanged Nut	6G-45
11-131516-000	Flange Nut (3/4-16)	10A-23, 14A-17
11-132005-001	Heavy Hex Nut (3/8-18)	2L-24
11-140105-000	Square Nut (1/2-13)	2L-36
11-155307-001	Spline Nut (5/16-24)	6J-3
11-155401-002	Spline Nut (3/8-24")	6F-18
11-160005-001	AFBMA Standard Locknut	10A-11, 14A-11
11-170002-001	Hex Nylock Nut (6-32)	10B-37
11-170004-000	Locknut	8A-32, 10L-50
11-170005-001	Hex Nut Nylock (#10-24)	32A-25, 10B-6, 8F-5
11-170006-001	Hex Nut Nylock (#10-32)	20C-7
11-170007-000	Locknut (1/4-20)	10L-36
11-170007-001	Hex Nut Nylock (1/4-20")	30A-26, 32A-6, 18B-26, 10C-40, 6D-2, 12D-21, 2G-30, 6G-35, 4H-19, 8H-26, 12H-36, 2L-41, 8L-20, 4P-20
11-170008-001	Hex Nut Nylock (1/4-28)	14C-26, 12C-15

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-170009-000	Lock Nut	4G-38, 10L-39
11-170009-001	Hex Nut Nylock (5/16-18)	30A-20, 18B-20, 2F-11, 8F-13, 6H-10, 14H-19, 10K-31, 4L-20, 6L-15, 8L-7, 10L-20, 2P-30
11-170010-001	Hex Nut Nylock (5/16-24")	8C-34, 10C-33, 6E-5, 8G-39, 10G-7, 4K-16
11-170011-001	Hex Nut Nylock (3/8-16)	26A-2, 32A-30, 2E-43, 4E-43, 6E-17, 6G-30, 10G-8, 14H-21, 4K-9, 2L-18, 4L-18, 6L-30, 8L-17, 10L-4, 2P-25
11-170012-001	Hex Nut Nylock (3/8-24)	2E-8, 8E-9, 2F-36
11-170013-001	Self-Locking Nut (7/16-14)	6F-1
11-170014-001	Hex Nut Nylock (7/16-20)	2H-12
11-170015-001	Hex Nut Nylock (1/2-13)	12K-23, 14K-6
11-170016-001	Hex Nut Nylock (1/2-20)	2E-9, 8E-6, 6F-7
11-170019-001	Self-Locking Nut (5/8-11)	14D-40, 2L-7
11-170020-001	Self-Locking Hex Nut (5/8-18")	10K-6
11-170104-001	Flexlock Hex Nut (#10-24)	14A-23, 10C-6
11-170106-001	Hex Nut Flexlock (1/4-20)	6A-9, 8C-33, 10C-6, 2C-32
11-170107-001	Self-Locking Thin Nut (1/4-28")	12C-28
11-170108-000	Flexlock Hex Nut (5/16-18)	16C-2
11-170108-001	Flexlock Hex Nut (5/16-18")	2H-11
11-170109-000	Flexlock Hex Nut (5/16-24)	18C-16
11-170110-001	Hex Nut Flexlock (3/8-16)	8F-13, 14K-21
11-170114-000	Flexlock Thin Hex Nut (1/2-13)	2F-40, 10G-8, 4K-9
11-176001-001	Keps Nut (5/16-18)	38A-10, 2F-21, 6F-17
11-176006-001	Keps Nut (#10-24)	6D-8
11-180002-001	Clamping Nut & Spring (1/4-20)	4E-13
11-180006-001	Clamping Nut & Spring (1/2-13")	2E-38, 4H-52, 12H-78, 2K-12, 6K-26
11-190004-001	Flat Washer (#8)	8A-31, 2M-7
11-190006-001	Flat Washer - SAE (#10)	6A-71, 28A-27, 32A-24, 10B-12, 16B-8, 8C-28, 6C-22, 2C-36, 6E-12, 10F-5, 16H-20, 6J-40, 8K-6, 2P-27
11-190010-000	Flat Washer (1/4)	8D-53, 10L-34
11-190010-001	Flat Washer (1/4)	4A-33, 6A-58, 30A-27, 38A-37, 14B-15, 18B-27, 20B-18, 8C-24, 10C-17, 14C-41, 22C-7, 2C-39, 12C-35, 6D-17, 10D-26, 12D-22, 14D-32, 4E-12, 12H-35, 14H-17, 2J-37, 4J-24, 6J-41, 2L-56, 2M-16, 4M-12, 2P-12, 4P-9
11-190012-001	Flat Washer - SAE (5/16)	2A-33, 20A-9, 30A-19, 32A-10, 10B-28, 18B-19, 8C-41, 14C-36, 4E-18, 8E-13, 2F-12, 4F-18, 8F-12, 2G-41, 4G-34, 4H-30, 6H-9, 12H-109, 14H-18, 16H-26, 2J-25, 4J-41, 6J-35, 10L-19
11-190014-001	Flat Washer (3/8)	18A-3, 8C-37, 6C-14, 20C-23, 18C-29, 12C-25, 4C-28, 14D-24, 2E-33, 2F-35, 8F-12, 2G-44, 10G-9, 4H-6, 12H-79, 14H-28, 16H-14, 18H-27, 4K-11, 14K-20, 6L-32, 8L-16
11-190016-001	Flat Washer (7/16)	8A-2, 10F-13, 4H-12, 8H-14, 12H-80, 18H-19
11-190018-001	Flat washer (1/2)	8A-8, 18A-6, 2E-45, F10-4, 4G-45, 2H-6, 2J-7, 2K-17, 6K-31, 12K-22, 8L-18
11-190022-001	Flat Washer (5/8)	14D-39, 4H-50, 12H-81, 10K-22
11-190024-000	Plain Washer (7/8)	12H-82, 20H-25
11-190024-001	Washer	12H-52
11-190509-001	Flat Washer	6A-21
11-190511-001	Flat Washer	2E-20
11-190512-001	Flat Washer	2E-16
11-190514-001	Flat Washer	2A-22, 6J-26, 8L-13
11-190515-001	Flat Washer	2L-47
11-190516-001	Washer	2L-2
11-190518-001	Plain Washer (1)	10K-15, 12K-34

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-190520-001	Plain Washer	2E-12, 10K-27
11-190521-001	Plain Washer	4H-55, 12H-110, 2P-21, 4P-18
11-190522-000	Washer (13/32)	10L-52
11-190522-001	Plain Washer	2L-23, 6L-33, 10L-3
11-190523-000	Plain Washer	4L-22
11-190527-000	Plain Washer	2L-58
11-190529-001	Plain Washer	2J-18
11-191010-001	Flat Washer (1/4)	18H-35
11-191012-000	Flat Washer (5/16)	2L-39
11-191012-001	Flat Washer (5/16)	4L-23, 6L-4
11-191014-000	Washer (3/8)	10L-54
11-191014-001	Flat Washer (3/8)	8G-3, 6L-31, 10L-47
11-191016-001	Flat Washer (7/16)	38A-15
11-191018-001	Flat Washer (1/2)	6F-3, 10F-22, 2L-20
11-191024-001	Flat Washer (3/4)	6F-6, 2H-15
11-195006-000	Lockwasher (#6)	10L-72
11-195010-001	Lockwasher (#10)	4A-29, 6A-42, 28A-28, 30A-37, 8C-27, 6C-23, 20C-13, 2C-37, 12C-43, 4C-25, 6E-13, 10F-6, 6G-34, 6J-14, 8K-9
11-195012-001	Lockwasher (#12)	4J-50
11-195014-001	Lockwasher (1/4)	6A-25, 18A-31, 22A-3, 28A-39, 10B-18, 14B-14, 20B-17, 8C-23, 10C-32, 6C-32, 14C-40, 20C-16, 24C-11, 2C-40, 12C-19, 4C-24, 6D-22, 14D-35, 4E-11, 4F-27, 8G-35, 12H-38, 14H-20, 16H-11, 18H-33, 20H-10, 2J-38, 6J-43, 8K-12, 12K-2, 14K- 25, 4L-4, 6L-20, 2M-13, 2P-14, 4P-11
11-195015-000	Lockwasher (5/16)	2L-43
11-195015-001	Lockwasher (5/16)	2A-26, 6A-43, 28A-37, 34A-23, 36A-29, 38A-10, 14C-35, 2C-44, 12C-38, 4C-22, 4E-19, 4F-25, 2G-42, 4G-36, 2H-34, 4H-15, 8H-20, 12H-59, 14H-7, 16H-27, 2J-22, 4J-35, 6J-34, 12K-29, 6L-11, 10L-64
11-195016-001	Lockwasher (3/8)	2A-23, 18A-26, 26A-17, 28A-2, 36A-20, 6C-7, 12C-31, 4C-16, 6D-20, 12D-5, 14D-23, 2E-32, 4E-44, 2F-31, 2G-45, 8G-27, 2H-41, 4H-15, 8H-20, 12H-85, 14H-30, 16H-7, 18H-2, 20H-2, 4J-6, 6J-48, 2K-11, 6K-25, 10K-12, 12K-14, 8L-14, 2M-21
11-195017-001	Lockwasher (7/16)	18A-22, 8G-30, 4H-13, 8H-15, 12H-86, 18H-20, 4J-40, 6J-25, 8K-23
11-195018-001	Lockwasher (1/2)	28A-31, 36A-26, 18B-6, 4E-29, F10-3, 6G-39, 4H-38, 12H-87, 2J-39, 2K-3, 6K-17
11-195020-001	Lockwasher (5/8)	28A-34, 10G-23, 12H-102, 2K-20, 4K-23, 10K-23
11-196006-001	Hi-Collar Lockwasher (#8)	20B-30
11-196008-001	Hi-Collar Lockwasher (#10)	6A-60, 14C-38
11-196012-001	High Collar Lockwasher (1/4)	4F-13
11-196014-001	High Collar Lockwasher (5/16)	2L-14
11-196020-001	Shaft	8H-32
11-196024-001	High Collar Lockwasher (5/8)	8H-7
11-198005-001	External Tooth Lockwasher (1/4)	22C-8, 8D-37, 14D-49
11-198007-001	External Tooth Lockwasher (3/8)	20C-24
11-198009-001	External Tooth Lockwasher (1/2)	2F-3
11-198508-001	Countersunk Lockwasher (#10)	8C-38, 2C-19
11-199005-001	Internal Tooth Lockwasher (1/4)	8D-58, 10D-33
11-199019-000	Internal Tooth Lockwasher (1-1/8)	8G-33
11-230000-000	Roll Pin (3/16 x 1-3/4")	14C-46
11-230000-001	X-Washer (3/32)	2A-14, 4A-51, 6A-19, 18A-11, 20A-12, 28A-9, 30A-41, 2B-27, 6B-10, 10B-14, 12B-6, 16B-7, 8C-25, 6C-31, 2C-38, 20H-30, 4J-38, 8K-11

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-230001-000	"X" Washer (1/8)	10L-79
11-230001-001	X-Washer (1/8)	2A-21, 4A-18, 6A-15, 20A-13, 32A-28, 38A-36, 2B-28, 14B-6, 16B-21, 20B-23, 10C-21, 14C-33, 20C-1, 10D-35, 14D-47, 4G-27, 6K-1, 10K-33, 14K-4, 16K-1, 4M-11 30A-32, 6B-20, 12B-2, 6C-27, 8D-4, 4J-21, 2L-9
11-230002-001	"X" Washer (5/32)	10C-31, 12C-42, 4C-26, 8D-25, 8L-23
11-230003-001	"X" Washer (3/16)	2E-26, 4E-35, 4G-10, 10G-18, 2J-6, 4K-6
11-230005-001	"X" Washer (1/4)	10A-10, 14A-10
11-231005-001	AFBMA Standard Lockwasher	38A-27
11-251000-000	Expansion Plug (1-1/8")	4F-15
11-280001-000	Grease Fitting (11/32")	26A-3, 30A-33
11-280002-000	Grease Fitting Drive	16C-1, 18C-22
11-300001-001	Tubular Flat Head Rivet	10A-20
11-301001-001	Rivet (3/16-3/8")	10A-20
11-301002-001	Rivet (3/16-1/2")	10A-18
11-301003-001	Rivet	8A-25
11-335053-001	Cotter Pin (1/16 x 1/2")	2H-38
11-335263-001	Cotter Pin	2F-29
11-345152-001	Roll Pin (.125 X 3/8")	14C-50, 18C-17
11-345154-000	Roll Pin (1/8 x 1/2")	10F-23
11-345160-000	Pin	10F-1
11-345160-001	Roll Pin (1/8 x 7/8")	16C-12, 18C-4
11-345161-000	Roll Pin (1/8 x 15/16")	20C-29, 10F-12
11-345258-001	Roll Pin (5/32 x 3/4")	8L-34
11-345263-001	Roll Pin (5/32 x 1-1/8")	8L-33
11-345264-001	Roll Pin (5/32 x 1-1/4")	4A-1, 6A-20, 8B-8, 16B-38
11-345302-001	Roll Pin (3/16 x 3/8")	6A-47, 6B-11, 16B-24, 10C-12, 14C-47
11-345304-000	Roll Pin (3/16 x 1/2")	4G-6, 4J-15
11-345306-000	Roll Pin (3/16 x 5/8")	6A-40, 14C-30
11-345310-001	Roll Pin (3/16 x 7/8")	6A-17, 14B-9
11-345312-000	Roll Pin (3/16 x 1")	6J-11
11-345315-000	Roll Pin (3/16 x 1-3/8")	14D-26
11-345316-000	Roll Pin (3/16 x 1-1/2")	2F-42, 4F-21
11-345318-000	Roll Pin (3/16 x 1-3/4")	6A-56, 30A-12, 16B-3, 18B-12
11-345404-000	Roll Pin (1/4 x 1/2")	4G-7
11-345406-000	Roll Pin (1/4 x 5/8")	6C-13, 16C-20, 12C-13, 4C-7, 10L-33
11-345408-001	Roll Pin (1/4 x 3/4")	22A-10, 2G-27
11-345412-000	Roll Pin (1/4 x 1")	4G-4, 10G-27, 4K-19
11-345418-001	Roll Pin (1/4 x 1-3/4")	10G-19, 4K-21
11-345420-001	Roll Pin - (1/4 x 2")	22A-9
11-345463-000	Roll Pin - (.312 X 1-1/8")	10L-43
11-345520-000	Roll Pin (3/8 x 2)	8H-8
11-345520-001	Roll Pin (3/8 x 2")	2J-9
11-345521-000	Roll Pin - (.375 X 2-1/4")	10D-28, 14D-42
11-345522-000	Roll Pin - (.375 x 2-1/2")	10F-10
11-345573-000	Roll Pin (1/2 x 2-3/4")	10A-15, 14A-15
11-350456-001	Drive Pin (1/4 x 7/8")	22A-22
11-353205-000	Drive Pin (5/16 x 3/4")	22A-21
11-353207-000	Drive Pin (5/16 x 1")	22A-24, 2F-15
11-353208-001	Drive Pin (5/16 x 1-1/4")	8L-3
11-354002-001	Groove Pin	4B-4
11-360257-000	Spirol Pin (3/32 x 9/16")	4B-5, 6J-27
11-360258-001	Spirol Pin (3/32 x 5/8")	2B-33
11-360260-000	Spirol Pin (3/32 x 3/4")	16B-31
11-360264-000	Spiral Pin (3/32 x 1")	16B-46
11-360364-000	Spiral Pin (1/8 x 1")	10C-29
11-360365-001	Spirol Pin (1/8 x 1-1/8")	12H-105
11-360415-001	Spirol Pin (5/32 x 1-1/8")	4A-44, 14B-5
11-360460-000	Spiral Pin (3/16 x 3/4")	2B-22
11-360462-000	Spirol Pin (3/16 x 7/8")	4A-12
11-360464-000	Spirol Pin (3/16 x 1")	

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-360465-000	Spirol Pin (3/16 x 1-1/8")	16B-35
11-360466-000	Spirol Pin (3/16 x 1-1/4")	10C-35, 14C-19
11-360554-000	Spirol Pin (1/4 x 3/8")	4A-19
11-360568-000	Spirol Pin (1/4 x 1-1/2")	2A-12
11-360619-000	Spiral Pin (5/16 x 1-5/8")	20A-14
11-361315-000	Spirol Pin (3/16 x 1-3/8")	2B-29
11-387264-002	Rolled Spacer (5/16 x 1")	14H-12, 10L-61
11-413001-000	Ball Bearing	6L-7
11-413051-000	Adapter Bearing Flange	6L-6
11-420000-000	Sleve Oilite Bearing	14C-44
11-420003-000	Bearing (.260 I.D. X .377 O.D.)	4A-23
11-420006-000	Bearing (.3765 I.D. X .503 O.D.)	2B-10, 6B-4, 12B-19, 4C-20
11-420007-000	Bearing (.3765 I.D. X .503 O.D.)	8D-66
11-420008-000	Sleve Oilite Bearing	8A-17
11-420009-000	Sleve Oilite Bearing (.5015 I.D. X .628 O.D.)	10G-2, 4K-3
11-420011-000	Sleve Oilite Bearing	22A-18
11-420014-000	Bearing (.5025 I.D. X .6275 O.D.)	2J-29
11-420015-000	Sleve Oilite Bearing	22A-17
11-420018-000	Sleve Oilite Bearing	30A-14, 16B-4, 18B-14
11-420019-000	Sleve Oilite Bearing (.627 I.D. X .753 O.D.)	18A-32, 10G-2, 4K-4
11-420020-000	Bearing (.627 I.D. X .753 O.D.)	22A-20
11-420035-000	Sleve Oilite Bearing	2G-8, 12G-15
11-420038-000	Bearing (.3135 I.D. X .4395 O.D.)	30A-6, 14K-14
11-420041-000	Bearing (.504 I.D. X .628 O.D.)	16B-6
11-420043-000	Sleve Oilite Bearing	6C-15, 14C-1
11-420045-000	Sleve Oilite Bearing	12H-44, 20H-19
11-420046-000	Sleve Oilite Bearing	20C-3
11-420048-000	Bearing (.1885 I.D. X .3145 O.D.)	8C-12, 2C-12, 4J-33
11-420053-000	Bearing (.3765 I.D. X .5025 O.D.)	6B-17, 12B-24
11-420054-000	Sleve Oilite Bearing	2F-18
11-420055-000	Bearing (.3155 I.D. X .4395 O.D.)	8D-38
11-420056-000	Bearing (.3775 I.D. X .5025 O.D.)	8D-52
11-420059-000	Bearing (.5025 I.D. X .629 O.D.)	6A-32
11-420062-000	Bearing (.503 I.D. X .628 O.D.)	14B-20
11-420063-000	Sleve Oilite Bearing	4G-9, 12G-30
11-420064-000	Bearing (.3765 I.D. X .503 O.D.)	2B-11
11-420065-000	Bearing (.5025 I.D. X .753 O.D.)	14B-20
11-420066-000	Sleve Oilite Bearing	4G-3
11-420068-000	Bearing (.316 I.D. X .440 O.D.)	6B-18, 12B-3
11-420069-000	Bearing (.627 I.D. X 1.128 O.D.)	4G-41, 12G-26
11-420070-000	Sleve Oilite Bearing	8D-24
11-420094-000	Sleve Oilite Bearing	2E-18
11-420095-000	Sleve Oilite Bearing	4G-39
11-420102-000	Sleve Oilite Bearing	6G-14, 12G-44
11-420140-000	Bearing (1.504 I.D. X 1.755 O.D.)	2H-33
11-421004-000	Flanged Oilite Bearing	20C-19
11-421006-000	Flanged Bronze Bearing	8D-24
11-421008-000	Flanged Oilite Bearing	12C-26, 4C-9
11-421009-000	Bearing (.3765 I.D. X .502 O.D.)	2B-9, 12C-33, 4C-19, 6J-39
11-421011-000	Bearing (.502 I.D. X .627 O.D.)	6A-35, 28A-8, 10B-25
11-421014-000	Bearing (.502 I.D. X .627 O.D.)	2B-25, 2J-30
11-421015-000	Flanged Oilite Bearing	22A-16, 30A-29, 10B-23, 18B-29
11-421017-000	Flanged Oilite Bearing	4G-24
11-421019-000	Flanged Oilite Bearing	32A-4, 2G-14, 12H-89
11-421022-000	Bearing (.877 I.D. X 1.128 O.D.)	14D-17
11-421024-000	Bearing (.504 I.D. X .689 O.D.)	4A-22
11-421026-000	Flanged Oilite Bearing	20C-5
11-421027-000	Flanged Oilite Bearing	4G-14, 12G-21
11-421030-000	Flanged Bronze Bearing	4G-2
11-421032-000	Bearing (.502 I.D. X .627 O.D.)	12B-26
11-421035-000	Flanged Oilite Bearing	8C-1, 10C-28, 2C-1
11-421037-000	Bearing (.253 I.D. X .377 O.D.)	10C-34

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-421038-000	Flanged Bronze Bearing	10C-5
11-421039-000	Bearing (.3135 I.D. X .440 O.D.)	6C-16, 14C-1
11-421041-000	Flanged Oilite Bearing	2H-24
11-421045-000	Flanged Oilite Bearing	20C-39
11-421047-000	Bearing (.753 I.D. X .876 O.D.)	8C-4, 2C-27
11-421048-000	Flanged Oilite Bearing	8C-39, 2C-48
11-421049-000	Bearing (.753 I.D. x .878 O.D.)	12C-32, 4C-18
11-421053-000	Roll Pin (3/16 x 1-3/4")	4J-46
11-421054-000	Bearing (.3135 I.D. X .438 O.D.)	4J-30
11-421056-000	Bearing (.502 I.D. X .627 O.D.)	4A-7
11-421058-000	Flanged Oilite Bearing	2F-18
11-421060-000	Bearing (.626 I.D. X .815 O.D.)	8G-5
11-421061-000	Flanged Oilite Bearing	14C-54
11-421062-000	Bearing (.3765 I.D. X .503 O.D.)	6B-5, 12B-17
11-421065-000	Flanged Oilite Bearing	8C-3, 10C-38, 2C-3
11-421092-000	Flanged Bronze Bearing	6A-3, 28A-8
11-421093-000	Flanged Oilite Bearing	4A-25
11-421096-000	Bearing (.502 I.D. X 1.128)	6A-23
11-421107-000	Flanged Bronze Bearing	14K-2
11-421108-000	Bearing (.815 I.D. X 1.002 O.D.)	22A-15
11-421109-000	Flanged Oilite Bearing	28A-16, 30A-36
11-421110-000	Flanged Oilite Bearing	18H-38, 10L-17
11-421111-000	Flanged Oilite Bearing	10L-76
11-421147-000	Bearing (.5145 I.D. X .6905 O.D.)	4G-9, 6G-18
11-422001-000	Bearing (.891 I.D. X 1.375 O.D.)	14D-15
11-422002-000	Bearing (.510 I.D. X 1.000 O.D.)	8D-26
11-422009-000	Bearing (.510 I.D. X 1.000 O.D.)	2B-13
11-423000-000	Sleeve Oilite Bearing	8D-41
11-430002-000	Ball Bearing	36A-2
11-430003-000	Ball Bearing	24A-3
11-430004-000	Ball Bearing	10H-13
11-430007-000	Bearing (.6693 IDX1.5748 OD)	2F-7, 4H-44, 12H-104
11-430008-000	Ball Bearing	26A-26
11-430011-000	Ball Bearing	34A-6
11-430012-000	Bearing, single (.4724 ID X 1.2598 OD)	30A-22, 18B-22
11-430013-000	Ball Bearing	10H-3, 2L-37
11-430015-000	Ball Bearing	20H-6
11-430016-000	Ball Bearing	4F-1
11-430017-000	Ball Bearing	24A-12
11-430018-000	Ball Bearing	6J-4
11-430028-000	Ball Bearing	18H-15
11-430037-000	Ball Bearing	10L-42
11-430045-000	Ball Bearing	36A-15, 12H-42, 20H-16
11-431000-000	Ball Bearing	12D-14, 10K-3, 12K-24
11-431002-000	Ball Bearing	8B-1, 16B-32
11-431003-000	Ball Bearing	8B-2, 16B-33
11-431006-000	Ball Bearing	16C-9, 18C-1
11-431010-000	Ball Bearing	16C-27, 18C-13
11-432000-000	Ball Bearing	10H-17
11-432001-000	Ball Bearing	38A-4
11-432002-000	Ball Bearing	12A-6, 16A-2
11-433000-000	Ball Bearing	8A-26
11-434001-000	Bearing (.500 ID X 1.1250 OD)	4F-20
11-435001-000	Ball Bearing	2A-6, 18A-17
11-435501-000	Ball Bearing	8A-30
11-436000-000	Ball Bearing	2B-4, 14B-21, 16B-14
11-436001-000	Ball Bearing	4A-20
11-436002-000	Stud Bearing (.186 I.D. X .500 O.D.)	2B-26, 12B-22
11-437000-000	Ball Bearing	4A-27
11-450001-000	Bearing	4F-5
11-450051-001	Ball Bearing	4J-22
11-450100-000	Ball Ring & Roller Bearing	12A-3, 16A-5

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-450101-000	Ball Ring & Roller Bearing	26A-19
11-450200-000	Ball Bearing	12A-2, 16A-6
11-450201-000	Inner Ring	4F-6
11-450202-000	Ball Bearing	12D-12, 14D-6
11-450301-000	Ball Bearing	28A-21, 30A-34
11-450302-000	Ball Bearing	4G-26
11-450304-000	Cam Bearing (.4377 I.D. X 1.500 O.D.)	18A-25
11-460000-000	Needle Roller Bearing	2G-17, 8G-1
11-461000-000	Needle Roller Bearing	10D-20, 16K-10
11-480001-000	Cam Follow Needle Bearing	6C-11, 20C-18, 12C-11, 4C-4, 6D-13, 14D-12
11-481028-000	Roller Bearing (1/4 I.D. X 7/16 O.D.)	4A-49
11-481030-000	Roller Bearing (1 1/4 I.D. X 1 5/8 O.D.)	26A-5
11-483000-000	Needle Roller Bearing	8D-40
11-483001-000	Needle Roller Bearing	8D-27
11-483002-000	Needle Roller Bearing	14K-27
11-483005-000	Needle Roller Bearing (7/8 I.D. X 1 1/8 O.D.)	14D-19
11-483017-000	Needle Roller Bearing (11/16 I.D. X 7/8 O.D.)	8L-30
11-484000-000	Bearing	12D-7
11-490001-000	Ball Bearing	10D-22, 2K-5, 6K-19
11-491000-000	Ball Bearing	4F-7
11-500001-000	Ball Bearing	8C-14, 6C-19, 2C-14
11-530017-001	External Retaining Ring	8A-9, 18A-12, 4G-40
11-530019-000	External Retaining Ring	4J-44
11-530021-001	External Retaining Ring	18A-33, 8G-12
11-530024-000	External Retaining Ring (.640 I.D.)	8L-35
11-530025-001	External Retaining Ring	4J-8, 6J-31
11-530027-000	External Retaining Ring	2A-24
11-530028-000	External Retaining Ring	14D-10, 14K-5
11-530030-001	External Retaining Ring	12D-13, 8H-29, 2L-29
11-530033-000	External Retaining Ring (.992 I.D.)	12D-17
11-530038-000	External Retaining Ring (.992 I.D.)	4F-21
11-530514-000	Internal Retaining Ring (1.282 I.D.)	6C-38
11-530522-000	Internal Retaining Ring	10H-11
11-530531-000	Internal Retaining Ring	18H-41
11-531008-000	Inverted Internal Retaining Ring	30A-23, 18B-23
11-531020-000	Inverted Internal Retaining Ring	10H-4
11-531511-001	Beveled Retaining Ring (1.693 O.D.)	12H-106
11-531512-000	Beveled Retaining Ring (1.761 O.D.)	4J-9, 6J-30
11-532003-001	External Retaining Ring	26A-11
11-532022-000	Grip Ring	8A-14
11-533028-000	Spirolox Retaining Ring (1.198 I.D.)	26A-4
11-533512-000	External Spirol Retaining Ring	10D-17, 6K-6
11-534510-001	Grip Ring (.250 SHAFT DIA.)	32A-21
11-536026-000	Internal Spirol Retaining Ring	4F-8
11-575093-000	Steel Ball (3/8")	22C-4
11-590000-000	Oil Hole Cover	12G-24
11-590102-000	Oil Gauge-Plug Type	22A-4
11-599001-000	Turnbuckle (5/16-24 RH/LH X 5-1/4)	10L-11
11-600001-000	Connecting Link (1/2") (#40)	4A-2
11-602101-000	Cord Grip	10B-8
11-603114-000	Cable Tie	8E-15
11-603201-000	Hose Clamp	2H-42
11-604105-000	Cable Clamp (3/8 X .359)	6A-72
11-606200-000	Pin Deflector Cord	12H-95, 14H-25
11-609202-000	Tie Down Rubber (35" Long)	20B-25
11-611009-000	Small Strain Relief Bushing	6L-25
11-611011-000	Large Strain Relief Bushing	4L-8, 6L-18, 2M-9
11-613510-000	Terminal Tab	20B-25
11-615052-000	Micro Switch	4M-1
11-615053-000	Micro Switch	4M-2
11-615502-000	Toggle Switch	4L-12, 6L-19

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
11-616013-000	Switch (#V3-101-D8)	4M-13
11-623001-000	90 Degree Angle Plug	6M-21
11-623005-000	90 Degree Angle Plug	6M-23
11-625000-000	Oil Seal	10A-7, 14A-7
11-625001-000	Oil Seal	24A-14
11-625002-000	Oil Seal	38A-7
11-625003-000	Oil Seal	24A-7
11-625005-000	Oil Seal	24A-14
11-625501-000	O-Ring	10A-2, 14A-2, 16A-1
11-625529-000	O-Ring	24A-19
11-625530-000	O-Ring	24A-28, 34A-11
11-625537-000	O-Ring	10K-16, 12K-31
11-625538-000	O-Ring	6A-22, 38A-22, 4M-3
11-650001-000	Bumper	4J-47
11-650002-000	Bumper	4P-16
11-651004-000	Grommet	12H-92, 6J-47
11-672518-000	Relay	6M-4
11-674995-000	Push Button Switch	4M-8
11-676010-000	Cement (1/2 Pint)	14G-10
11-678001-000	Electrical Cap (230 Volt)	10B-7, 6M-13
11-678601-000	Flush Base Connector	4L-15
11-679201-000	Connector Body	4L-17
11-679202-000	Connector Body	6M-12
11-679303-000	Twist Lock Receptacle	6M-13
11-679306-000	Twist Lock Receptacle	6M-12
11-679307-000	Twist Lock Receptacle - Hubbell 7586	6M-13
11-684104-000	Fuse, 1 amp	6M-15
11-685017-000	Fuse, 3 amp	6M-15
11-685127-000	Fuse Holder	6M-16
11-696107-000	Capacitor (.50 UF)	6M-2
12-100004-002	Shaft	2B-17, 6B-19, 20B-9
12-100004-004	Shaft	2B-31, 12B-25, 20B-5
12-100014-000	Shaft	14B-10, 20B-2
12-100015-000	Tension Spring	10B-20
12-100016-000	Detector Disc	8B-10, 16B-40
12-100017-000	Detector Rod	4B-10
12-100019-000	Lever	14B-8
12-100022-000	Solenoid (110 Volt)	10B-3
12-100023-002	U-Bolt	2A-35
12-100023-003	U-Bolt	2A-39
12-100025-000	Clutch Actuator Link	6A-18
12-100026-000	Link	6A-8
12-100030-002	Roller	6A-11
12-100030-003	Roller	6A-59
12-100030-004	Roller	6A-57
12-100030-005	Roller	4A-35, 6A-10
12-100030-007	Roller	4A-48
12-100032-000	Rivet Pin	4A-46
12-100033-000	Reset Latch Assembly	4A-15
12-100037-000	Cam	8B-4, 14B-17, 16B-13
12-100040-004	Link	28A-15, 20B-8
12-100043-000	Tension Spring	6A-29
12-100044-000	Ring	28A-4
12-100045-000	Rake Cam Hub	34A-3
12-100046-003	Spacer	30A-4, 18B-4
12-100046-004	Roller	26A-27
12-100047-000	Tension Spring	6A-41
12-100048-000	Bracket	22A-1
12-100049-000	Spring	4A-41, 8K-1
12-100050-000	Stop Collar	4A-3, 6A-34
12-100051-000	Stop	30A-7, 18B-7
12-100052-000	Pivot Block	4B-1

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-100053-000	Pin	8A-24
12-100054-000	Deck Hook Link	14B-22, 20B-12
12-100057-000	Deck Hook Link	14B-4, 16B-22, 20B-1
12-100058-000	Spring Disc	10A-9, 14A-9
12-100059-002	Shim (.030), coral	38A-6
12-100059-003	Shim (.020), yellow	38A-6
12-100059-004	Shim (.010), brown	38A-6
12-100059-005	Shim (.002), red	38A-6
12-100061-002	Pin	8A-27
12-100064-000	Bar	2A-19
12-100065-002	Washer	24A-2, 36A-18
12-100066-000	Spacer	12A-5, 16A-3
12-100068-000	Drive Gear	34A-20
12-100069-000	Stud	2A-7
12-100070-000	Detector Shaft	8B-15, 16B-45, 20B-10
12-100072-000	Shaft	2A-8
12-100074-000	Bearing Shaft	18A-18
12-100077-000	Spring Guide	16B-11
12-100078-000	Actuator Pin Switch	38A-34, 10D-35
12-100079-000	Guide	4B-3
12-100080-000	Stud	30A-25, 18B-25
12-100081-000	Pulley Assembly	28A-18, 10D-15
12-100082-000	Spring	16B-10
12-100083-000	Tension Spring	16B-17
12-100084-000	Tension Spring	10B-21
12-100086-000	Tension Spring	16B-23
12-100087-000	Spring	14B-3
12-100088-000	Oil Seal	34A-15
12-100089-000	Compression Spring	14B-23
12-100090-000	Compression Spring	10A-12, 14A-12
12-100091-000	Compression Spring	8A-7
12-100092-000	Spring Guide	8A-6
12-100093-000	Plunger	4A-5, 6A-27, 38A-31
12-100096-000	Block	2A-40
12-100097-000	Deck & Scissor Latch	16B-26, 20B-11
12-100102-000	Tension Spring	34A-5
12-100104-000	Shaft	28A-14
12-100105-000	Tension Spring (Pkg. Of 2)	6A-5
12-100106-000	Clutch Reset Lever Shaft	4A-11
12-100107-000	Spring	2A-17, 20A-7
12-100109-000	Tension Spring	34A-30
12-100111-000	Cam	8B-11, 12B-1, 16B-41
12-100112-000	Cam	8B-12, 16B-42
12-100113-000	Link	6B-8, 12B-8
12-100115-002	Spring Pin	38A-26
12-100115-003	Spring Pin	4A-30
12-100116-000	Shaft	2B-30, 12B-9, 20B-6
12-100118-000	Spring	6B-7, 12B-20
12-100121-000	Tension Spring	12B-7
12-100122-000	Extended Cycle Cam	34A-16
12-100123-000	Cam	34A-18
12-100129-000	Scissor Cam Lever	16B-28
12-100130-000	Shaft	34A-9
12-100134-000	Crank	36A-22
12-100139-003	Plain Bearing	22A-19
12-100139-006	Bearing	4B-7
12-100140-000	Spur Gear	34A-21
12-100141-002	X-Washer Pin	36A-23
12-100150-000	Gear	24A-5
12-100151-000	Spur Gear	36A-6
12-100155-000	Shoe	2B-21, 14B-25
12-100156-000	Tension Spring	16B-20

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-100157-000	Spring	2B-7, 6B-2, 12B-14
12-100158-000	Tension Spring	2A-27, 18A-8
12-100159-000	Tension Spring	2A-18
12-100162-000	Ball Valve	16C-22, 18C-8
12-100164-000	Rectangular Key	34A-8
12-100165-000	Support Plate Assembly	38A-14
12-100166-004	X-Washer Pin	4A-17, 6A-50, 12B-12, 16B-18, 8K-4
12-100166-005	X-Washer Pin	4A-39, 6A-17, 28A-13
12-100166-006	X-Washer Pin (7/8 x .187)	2A-28, 30A-40, 10B-19, 16B-9
12-100166-007	X-Washer Pin	6A-61, 14C-32
12-100166-008	X- Washer Pin	16B-9
12-100166-009	X-Washer Pin	6K-2
12-100166-011	X-Washer Pin	2B-19, 16B-27, 6K-3
12-100166-013	Pin	6A-16, 16B-18
12-100166-014	Pin	14B-7
12-100166-015	X-Washer Pin	6K-4, 14K-3
12-100166-016	X-Washer Pin	16K-4
12-100166-017	X-Washer Pin	6A-68
12-100166-019	X-Washer Pin	4A-52, 6A-44, 28A-12
12-100166-021	X-Washer Pin	30A-31
12-100166-022	X-Washer Pin	2A-11, 18A-10, 20A-4, 10B-11
12-100166-024	X-Washer Pin	2A-10, 6B-9, 12B-4
12-100166-025	X-Washer Pin	6A-46
12-100166-026	X-Washer Pin	2B-5
12-100166-027	Pin (.2495 x .820)	2A-16, 20A-5
12-100166-029	Pin	6B-15, 12B-13
12-100166-031	Pin	8D-3
12-100166-032	X-Washer Pin	10K-34
12-100167-000	Spring	6A-62, 4B-8, 14C-31
12-100168-002	Pin	18A-16
12-100168-004	Pin	18A-35
12-100168-005	X-Washer Pin	14K-7
12-100169-003	Pin	10B-13, 20B-33
12-100169-006	Post	22A-22
12-100169-008	Pin	36A-33, 38A-25
12-100170-003	Washer	26A-25, 10K-5
12-100170-004	Washer	2A-25
12-100170-006	Washer	28A-3
12-100170-007	Washer	18A-34, 30A-3, 18B-3
12-100170-008	Washer	2B-16, 6B-23, 12B-21
12-100170-009	Washer	2B-12, 6B-1, 12B-16
12-100170-012	Washer	6A-26, 8A-8, 28A-40, 12H-116
12-100170-015	Washer	28A-33
12-100170-016	Washer	6J-22
12-100170-017	Washer	10D-18, 6K-7
12-100170-018	Washer	14B-21
12-100170-019	Washer	4A-21
12-100170-021	Spacer	4A-31
12-100174-002	Worm Sheel (60:1)	36A-5
12-100175-000	Latch	16B-25
12-100176-002	Clutch Reset Lever Assembly	4A-26
12-100177-000	Gear Box Cover	24A-9
12-100178-000	Deck Hook Cam Lever	2A-9
12-100183-000	Deck Hook Latch Assembly	16B-5
12-100185-002	Spacer	12A-4, 16A-4
12-100185-003	Spacer	10A-6, 14A-6
12-100185-004	Spacer	34A-29
12-100185-005	Spacer	24A-4
12-100185-006	Spacer	24A-6
12-100185-007	Spacer	36A-7
12-100185-008	Spacer	10B-29
12-100185-009	Spacer	24A-29

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-100185-012	Spacer	2B-6
12-100185-014	Spacer	8A-22, 12H-97
12-100185-018	Spacer	6B-24, 12B-27
12-100185-019	Spacer	14B-18, 16B-19
12-100185-036	Spacer	2E-5, 8E-18
12-100187-002	Square Key	16A-14, 36A-9, 38A-16
12-100187-003	Square Key	36A-17
12-100187-005	Square Key	24A-37, 26A-29
12-100187-007	Square Key	34A-7
12-100187-008	Square Key	34A-10
12-100187-009	Square Key	14K-15, 6L-14
12-100187-011	Square Key	16A-17, 8B-14, 16B-44
12-100188-000	Shaft	16B-30
12-100189-000	"D" Shaft Assembly	2B-20, 16B-15, 20B-13
12-100196-000	Retaining Ring	4B-6
12-100198-000	Detector Gear	8B-13, 16B-12
12-100205-000	Detector Mounting Assembly	2B-24, 20B-14
12-100207-000	Mounting Plate	28A-7, 30A-28, 34A-17, 18B-28
12-100213-000	Trip Rod Assembly	20H-29
12-100216-000	Deck Link Adjusting Sleeve	26A-30
12-100219-000	Cam Lever Link	30A-30
12-100220-000	Pin	24A-39
12-100223-000	Washer	34A-24
12-100224-000	Lever	14B-16, 20B-19
12-100226-000	Pin	28A-19
12-100231-000	Sleeve	38A-24
12-100233-000	Idler Gear	30A-21, 18B-21
12-100236-000	Starter Bellcrank Assembly	6A-12, 28A-11
12-100238-051	Latch & Bearing Assembly	30A-13, 16B-2, 18B-13
12-100242-000	Deck Hook Cam Lever Assembly	2A-15
12-100250-000	Clutch Cam Lever Assembly	18A-7
12-100260-000	Actuator	28A-24
12-100261-000	Detector Rod Assembly	16B-29, 20B-3
12-100262-000	Intermediate Lever Assembly	12B-28
12-100277-000	Solenoid Box Cover	10B-4
12-100280-000	Moving Deck Cable Assembly	38A-11, 10D-16
12-100281-000	Cable & Tube Assembly	36A-1, 38A-9
12-100282-000	Deck Hook U-Bolt	20A-1, 24A-27
12-100283-000	Eccentric	20A-8, 24A-26
12-100290-000	O-Ring	24A-22
12-100295-000	O-Ring	38A-8
12-100296-000	Tension Spring	6A-1
12-100298-000	Spacer	6A-30
12-100304-000	Bearing	6A-48
12-100305-000	Pin Assembly	30A-38
12-100306-000	Pin Assembly	28A-20
12-100308-000	Locating Pin	22A-11
12-100313-000	Moving Deck Cam Lever	28A-17
12-100314-000	Detector Mounting Plate Assembly	10B-30
12-100316-000	Gear Box Oil Pan	2A-1
12-100317-000	O-Ring	16A-18, 36A-8, 38A-18
12-100318-002	X-Washer Pin	8A-28
12-100318-003	X-Washer Pin	20H-31
12-100334-000	Sleve Oilite Bearing	4A-9
12-100337-000	Out-of-Range Link Assembly	6A-6, 12B-11, 20B-7
12-100338-002	Spacer	6A-4
12-100338-003	Spacer	6A-4, 12B-10
12-100339-000	L.H. Gear Box Cover Gasket	34A-12
12-100340-000	R.H Gear Box Cover Gasket	24A-8
12-100341-000	Rake Crank Housing Gasket	16A-16, 18A-13
12-100344-002	Gasket	2A-37, 24A-10
12-100344-003	Gasket	38A-20

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-100350-000	Link	2B-1
12-100351-000	Spring	38A-39
12-100352-000	Spring	38A-38
12-100353-000	Link	30A-9, 16B-1, 18B-9
12-100354-000	Adjusting Block	30A-10, 18B-10
12-100355-000	Spacer	2B-3
12-100357-000	Connecting Link	20A-15
12-100359-000	Magnetic Plug	22A-7
12-100363-000	Link	6A-13, 28A-10
12-100365-000	Scissor	30A-1, 18B-1
12-100370-000	Yoke & Bearing Assembly	8A-16
12-100381-002	Shim (.005" )	10A-4, 14A-4
12-100381-003	Shim (0.010")	10A-5, 14A-5
12-100382-000	Latch	6B-13, 12B-5
12-100384-000	Spacer	38A-21
12-100387-000	Deck Lift Hook Cam	24A-17
12-100391-000	Gear Box Housing Gasket	10A-3, 14A-3
12-100392-000	Lever	2A-20
12-100395-000	Detector Latch Assembly	2B-8
12-100398-000	Detector Lever Assembly	2B-14
12-100400-000	Detector Latch Assembly	6B-6, 12B-18
12-100404-000	Detector Latch Assembly	6B-3, 12B-15
12-100405-000	Flanged Bronze Bearing	6B-22, 12B-24
12-100406-000	Detector Lever Assembly	6B-21
12-100410-000	Hook Selector	14B-19, 16B-16
12-100416-002	Shim	8B-16, 16B-43
12-100418-000	Clutch Cam	2A-3
12-100420-000	Shaft & Spacer	38A-17
12-100430-000	Pin	6A-7
12-100431-000	Retaining Bearing	24A-11
12-100433-000	Bearing Retainer	34A-26
12-100437-000	Out-of-Range Lever Assembly	6A-33
12-100441-000	Special Hex Head Bolt	6A-52, 28A-38
12-100447-000	Groove Pin	8A-15
12-100457-000	Felt Wick	24A-31, 26A-20
12-100458-000	Felt Pad	24A-21, 26A-36
12-100459-000	Sight Gauge	22A-5
12-100465-000	Lever Assembly	4A-8
12-100469-000	Flanged Bearing	4A-10
12-100477-000	Bearing Retainer	10A-8, 14A-8
12-100479-000	Spring Tube	38A-9, 10D-36
12-100480-000	Key	20A-2
12-100481-000	Compression Spring	38A-41
12-100482-000	Compression Spring	38A-40
12-100483-000	Switch Actuator Pin	38A-35, 10D-36
12-100486-000	Clutch Lever Assembly	2A-2, 8A-33
12-100487-000	Pin	8A-29
12-100488-000	Latch Stud	30A-15, 18B-15
12-100490-000	Clutch Lever Reset Assembly	4A-14
12-100493-002	Rivet Pin	4A-43
12-100493-003	Rivet Pin	4A-38
12-100494-000	Spring Post	4A-45
12-100495-000	Clutch Actuator Lever	6A-2
12-100501-000	Cam	8B-6, 16B-36
12-100502-000	Spacer	8B-7, 16B-37
12-100504-000	Inner Ring	26A-6
12-100506-000	U-Bolt	26A-8
12-100507-000	Bearing Block	26A-1
12-100703-000	Pin	6A-36
12-100708-000	Clutch Release Lever Assembly	6A-28
12-100746-000	Clutch Latch	6A-14
12-100747-000	Clutch Latch	6A-14

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-100809-000	Mounting Plate	6A-63
12-100828-002	Scissor & Moving Deck Cam	28A-22, 34A-4
12-100830-000	Clamp Ring	24A-24, 26A-35
12-100831-000	Deck Lift Hook Cam	24A-40, 26A-41
12-100832-000	Deck Lift Hook	20A-3, 24A-23
12-100837-000	Deck Lift Hook Cam	26A-41
12-100863-000	Bell Crank Assembly	32A-5
12-100865-000	Tension Spring	32A-26
12-100866-000	Mounting Strap	32A-2
12-100867-000	Latch	32A-23
12-100869-000	Pivot Spacer	32A-3
12-100870-000	Washer Stud	32A-7
12-100871-000	Stud Plate	32A-17
12-100872-000	Retainer	32A-19
12-100873-000	Spacer	32A-11
12-100874-000	Tension Spring	32A-22
12-100875-000	Clip	32A-27, 38A-42, 10D-36
12-100876-000	Spacer	32A-15
12-100877-000	Bumper	32A-14
12-100891-000	Bearing Retainer	14A-20
12-100896-000	Spacer	24A-16, 26A-40
12-100898-000	Cover	24A-18
12-100901-000	Oil Hole Cover	22A-6
12-100902-002	Worm Gear (27:1)	16A-13
12-100903-000	Pin Detector Link	6A-37, 20B-4
12-100904-000	Link Clutch Release Lever	14C-29
12-100905-000	Spring	6A-38
12-102020-000	Cover	6A-74, 4M-7
12-102033-000	Link	4A-40
12-102043-000	Spring	6A-29
12-102108-000	Deck Hook Selector Assembly	2B-2, 14B-11
12-102123-000	Spacer	34A-19
12-102155-000	Shim (.010), brown	2A-34
12-102159-000	Bumper Adapter	38A-1
12-102161-000	Rake Crank Housing	36A-13
12-102162-000	Crank Shaft	36A-10
12-102163-000	Support Plate	36A-14
12-102165-000	Bearing Retainer	36A-3
12-102166-002	Shim (.005), blue	16A-16, 36A-11
12-102166-003	Shim (.010), brown	16A-16, 36A-11
12-102166-004	Shim (.020), yellow	16A-16, 36A-11
12-102167-000	Spacer	36A-16
12-102176-000	Clutch Reset Lever Assembly, for Model A-2	4A-47
12-102178-000	Spring	8A-18
12-102179-000	Bushing	8A-13
12-102180-000	Special Hex Head Socket Cap Screw	8A-11
12-102184-000	Gear Box Housing Assembly	22A-12, 20A-6
12-102212-000	Plate	18A-4
12-102236-000	Starter Bellcrank Assembly	6A-12, 28A-11
12-102363-000	Link	6A-13, 28A-10
12-102373-000	Bumper Button	36A-12, 38A-29
12-102380-000	Detector Disc	8B-10, 16B-40
12-102398-000	Detector Lever Assembly, for machines 90000 up	2B-32
12-102400-000	Detector Lever Assembly	12B-18
12-102406-000	Detector Lever Assembly	12B-23
12-102418-000	Clutch Cam	2A-3
12-102750-000	Stud	22A-13
12-102753-000	Spacer	26A-18
12-102754-000	Bearing Stud	26A-15
12-102789-000	Spacer	18A-24
12-102791-000	Block	26A-12
12-102792-000	Stud	26A-10

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-102794-000	Scissor & Moving Deck Cam	28A-6, 34A-2
12-102815-000	T-Track	26A-22
12-102816-000	Plate Assembly	26A-13
12-102819-000	Bearing Support Assembly	18A-19
12-102821-000	Guard	18A-29
12-102830-000	Mounting Plate	6A-63
12-150004-000	Guide	16C-11
12-150010-000	Clutch Mount Assembly	16C-17
12-150011-000	Latch Assembly	8C-3, 10C-26, 2C-3
12-150012-000	Torsion Spring	10C-25
12-150013-000	Turret Stop Lever Assembly	18C-16
12-150023-002	X-Washer Pin	10C-39
12-150023-007	X-Washer Pin	14C-45
12-150023-008	X-Washer Pin	20C-2
12-150025-000	Tension Spring	10C-15
12-150026-000	Spring	16C-13
12-150027-000	Compression Spring	16C-15
12-150039-000	Spider Ring	22C-1
12-150040-000	Turret Ring	22C-3
12-150049-000	Pin Release Lever Assembly	20C-38
12-150051-000	Turret Indexing Bell Crank Assembly	8C-8, 2C-8
12-150056-002	Roller Stud	8C-18, 2C-18
12-150056-003	Roller Stud	8C-13, 2C-13
12-150057-003	Strap	8C-10, 2C-10, 4J-31
12-150059-000	Plate	6C-18
12-150062-000	Stud	8C-4, 2C-25, 4J-28
12-150063-000	Spring Seat Assembly	8C-4, 2C-23, 4J-25
12-150064-000	Trip Lever Assembly	8C-4, 2C-4
12-150065-000	Link	8C-7, 2C-7
12-150066-000	Release Cam	20C-26
12-150068-000	Stop Washer Assembly	8C-4
12-150069-000	Roll Pin (3/16 x 5/8")	14C-12
12-150070-000	Tension Spring	6C-12, 12C-12, 4C-2
12-150071-000	Pin	14C-15, 20H-27
12-150072-000	Shoulder Screw	2C-9
12-150079-000	Trip	20C-15
12-150085-000	Support Rod	6C-35
12-150086-000	Turret Probe Assembly	20C-6
12-150087-000	Compression Spring	8C-4, 2C-24
12-150088-000	Spring Hook	14C-52
12-150090-000	Tension Spring	14C-11
12-150096-000	Tension Spring	20C-4
12-150106-000	Lower Clamp Plate	24C-13
12-150107-000	Upper Clamp Plate	24C-10
12-150108-000	Center Chute Assembly	20C-11
12-150109-000	Center Chute Repair Plate	20C-14
12-150111-000	Latch	14C-10
12-150113-000	Belt	6C-17, 2N-8
12-150113-600	Short Turret Drive Belt, 48-1/2"	2N-8
12-150115-000	Seal	22C-5
12-150116-000	Seal Retainer	22C-6
12-150117-000	Halo Ring Assembly	4C-13
12-150120-000	Stud	8C-5, 2C-5
12-150125-000	Roller	14C-43
12-150127-000	Spring	14C-55
12-150130-002	Wheel	12C-24, 4C-6
12-150130-005	Spring Wheel	4A-37, 10C-19, 8L-38
12-150130-006	Wheel	10C-22
12-150132-000	Tension Spring	14C-8
12-150138-000	Turret Delay Gear	8C-1, 10C-30, 2C-1
12-150142-002	Bumper	10C-3
12-150142-003	Bumper	14C-6

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-150143-002	Shaft	10C-1, 14C-18
12-150143-003	Interlock Shaft	14C-17
12-150144-000	Lever	14C-13
12-150145-000	Lever	14C-14
12-150147-000	Lever Assembly	14C-9
12-150149-000	Plunger	14C-51
12-150154-000	Flanged Oilite Bearing	16C-21, 18C-7
12-150157-002	Washer	10C-23
12-150157-003	Washer	8C-30, 14C-16, 2C-35
12-150157-004	Washer	6C-37
12-150158-004	X-Washer Pin	6C-28
12-150158-006	X-Washer Pin	6C-30, 14C-2
12-150158-007	X-Washer Pin (1 3/32 X .186)	6C-9, 14C-25
12-150158-012	X-Washer Pin	6A-44, 28A-12, 8C-36, 2C-30
12-150158-013	X-Washer Pin	8C-19, 2C-46
12-150158-015	X-Washer Pin	20C-20
12-150158-016	X-Washer Pin	10C-14
12-150158-017	X-Washer Pin	10L-77
12-150166-000	Pin	2C-47
12-150168-000	Stop Washer Assembly	2C-22
12-150176-000	L.H. Blocking Finger	10C-2
12-150181-000	Pin Guide Clamp	24C-6
12-150182-000	Turret Pin Guide Cushion	24C-5
12-150183-000	Grease Fitting	12C-21, 4C-3
12-150186-000	Spacer	8C-21, 2C-42
12-150187-000	Bottom Protector	6C-21, 14C-5
12-150190-000	Sieve Oilite Bearing	8C-32, 2C-33
12-150191-000	Internal Wrenching Nut	2C-45
12-150195-000	Latch Shoulder Screw	10C-11
12-150198-000	Clutch & Mount	8C-2, 2C-20
12-150200-000	R.H. Blocking Finger	10C-24
12-150209-002	Restricted Drop Spacer	10C-7
12-150209-004	Spacer	10C-37
12-150210-000	Restricted Drop Link	10C-10
12-150213-000	Restricted Drop Spring	10C-4
12-150214-000	Turret Release Lever Assembly	6C-10, 12C-10, 4C-8
12-150215-000	Spring	10C-20
12-150216-000	Turret Drive Clutch Assembly	16C-29, 18C-15
12-150217-000	Spacer	16C-26, 18C-12
12-150219-000	Pulley	16C-28, 18C-14
12-150220-000	Turret Clutch Drive Pulley	16C-24, 18C-10
12-150222-000	Compression Spring	16C-25, 18C-11
12-150226-000	Roller & Bearing Assembly	14C-3
12-150227-000	Linkage Assembly	8C-11, 2C-11, 4J-32
12-150228-000	Turret Frame Assembly	6C-1, 12C-1, 4C-17
12-150229-000	Cap	6C-2, 12C-2
12-150231-000	Turret Stop Lever	8C-16
12-150234-000	Interlock Link Assembly	14C-7
12-150235-000	Turret Index Latch Assembly	6C-36, 14C-22
12-150236-000	Pin	14C-20
12-150237-000	Interlock Link	20C-37
12-150239-000	Clutch Face Plug	16C-16, 18C-5
12-150242-000	Slide	12C-8
12-150244-000	Stud	12C-30
12-150245-000	Spacer	8C-29
12-150246-000	Bumper (1-1/16")	10C-41
12-150246-002	Bumper (1-1/4")	10C-41
12-150247-000	Stud	14C-4
12-150248-000	Bracket	12C-6
12-150250-000	Stop	12C-17
12-150252-000	Shoulder Screw	8C-9
12-150253-000	Post	18C-18

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-150254-000	Stud	10C-27
12-150255-000	Flanged Oilite Bearing	12C-34
12-150256-000	Bronze Bearing	14C-28
12-150258-000	Sleeve & Plate Assembly	18C-6
12-150259-000	Shaft	6C-40, 14C-21
12-150260-000	Slide	12C-9
12-150261-000	Plate	12C-7
12-150264-000	Stop	20C-27
12-150265-000	Bumper	20C-30
12-150266-000	Bracket	20C-32
12-150267-000	Spacer	20C-9
12-150268-000	Hex Head Socket Cap Screw (5/16 x 4-3/4")	20C-10
12-150269-000	Bracket	20C-40
12-150271-000	Lever & Spring Wheel Assembly	10C-18
12-150272-000	Spring A A/2	10C-20
12-150279-000	Lever Assembly	6C-29, 14C-1
12-150281-000	Pivot Pin	12C-27, 4C-10
12-150282-000	Roller	10C-36
12-150283-000	Long Turret Spoon	20C-34
12-150284-000	Short Turret Spoon	20C-31
12-150287-000	Interlock Link and Lever Assembly	14C-6
12-150289-000	Link	6C-8, 14C-24
12-150290-000	Turret Index Pulley Assembly	12C-14
12-150293-000	Shaft Clamp	14C-23
12-150294-000	Guide Wire (Pins 2, 3, 4, 6, 8 & 9)	24C-8
12-150295-000	Guide Wire (Pins 1, 7 & 10)	24C-15
12-150296-000	Turret Pin Guide	24C-14
12-150297-000	Turret Pin Guide	24C-7
12-150298-000	Restricted Drop Link	10C-9
12-150299-000	Pin Release Shaft	20C-36
12-150304-002	Special Hex Head Socket Cap Screw	20C-33
12-150304-003	Special Hex Head Socket Cap Screw	20C-12
12-150306-000	Disc	18C-19
12-150307-000	Spacer	18C-20
12-150309-000	Rod	24C-18
12-150310-000	Top Wire Form	24C-19
12-150311-000	Bottom Wire Form	24C-17
12-150313-000	Wire Form	24C-4
12-150314-000	Bottom Wire Form	24C-2
12-150324-000	Rod (10")	24C-3
12-150325-000	Bumper - Turret Stop	20C-30
12-200003-000	Scissor Deck	8D-15
12-200011-000	Deck Drive Pulley	14D-14
12-200012-000	Connecting Rod Assembly	8D-72
12-200013-000	Rod Assembly	8D-73
12-200014-000	Connecting Rod Assembly	8D-67
12-200016-000	Scissor Arm Assembly	8D-34
12-200016-091	Scissor Arm Assembly - Complete	8D-16
12-200017-092	Scissor Arm Assembly	8D-7
12-200018-000	Scissor Arm Assembly	8D-33
12-200019-092	Scissor Arm	8D-20
12-200020-000	Distributing Lever Assembly	8D-11
12-200022-000	Scissor Spring	10D-27
12-200023-000	Toggle Lever Assembly	8D-5
12-200025-000	Torsion Spring	14D-18
12-200026-000	Link (Scissor Arm)	8D-8
12-200027-000	Shoulder Pin	8D-10
12-200028-000	Shoulder Pin	8D-31
12-200029-000	Stud	8D-35
12-200031-003	Nylon Washer	8D-29
12-200031-004	Nylon Washer	8D-29
12-200032-000	Neoprene Stop	8D-18

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-200033-000	Shaft	14D-31
12-200035-000	L.H. Geneva Plate	6D-14
12-200036-000	R.H. Geneva Plate	6D-16
12-200038-000	Roller Bracket	8D-2
12-200039-000	Drag Link	8D-30
12-200041-000	Spacer	8D-17
12-200045-000	Link	8D-64
12-200047-003	Spacer	32A-20, 12C-36, 4C-21, 6D-23
12-200048-000	Wheel	8D-63
12-200049-003	Stud	22A-14
12-200049-004	Stud	22A-13
12-200051-000	Connecting Tube Assembly	8D-22
12-200053-000	Anchor	14D-25
12-200054-000	Stud	14D-4
12-200055-000	Pulley Assembly	10D-3, 12D-10, 14D-5
12-200058-000	Deck Ball Crank	14D-30
12-200059-002	Washer	8D-36
12-200059-003	Washer	12D-11
12-200059-004	Washer	14D-16
12-200061-000	Drag Link Pin	8D-14
12-200065-002	Washer	12D-9, 14D-8
12-200066-002	Cable Assembly	10D-10
12-200066-003	Cable Assembly	10D-11
12-200066-004	Cable Assembly	10D-4
12-200067-000	Scissor Cable Assembly	8D-61, 10D-2
12-200069-000	Barrel	10D-6
12-200081-002	Pin	8D-65
12-200081-003	Pin	8D-13
12-200084-002	Key	14D-11
12-200089-000	Track	6D-1
12-200090-000	Plate	14D-41
12-200091-000	Spacer	14D-27
12-200094-000	Wire	8D-19
12-200097-000	Cable Guide Assembly	14D-7
12-200099-000	Spring Retainer	10D-9
12-200103-000	Bearing	8D-59
12-200104-000	Flanged Oilite Bearing	8D-32
12-200105-000	Flanged Oilite Bearing	8D-9
12-200109-000	Hardened Stud	8D-12
12-200110-000	Stud	8D-60, 10D-34
12-200111-000	Deck Shim	14D-45
12-200114-000	Rubber Deck Roller Assembly	8D-39
12-200115-000	Rubber Deck Roller Only	8D-39
12-200120-004	Scissor Gripper Pad	8D-6
12-200124-000	Bracket	12D-19
12-200125-000	Keeper Spring	10D-8
12-200126-000	Wheel Assembly	14D-1
12-200127-000	Special Hex Head Socket Cap Screw (5/8 x 3-1/16")	14D-29
12-200128-000	Pin	12D-20
12-200129-000	Pin	12D-15
12-200133-000	Wheel & Screw Assembly	14D-1
12-200134-000	R.H. Deck Post & Hardware	12D-25
12-200135-000	L.H. Deck Post & Hardware	12D-1
12-200136-000	Plastic Spring Tube	14D-20
12-200139-000	Connecting Rod Assembly	8D-68
12-200140-002	Spacer	8D-69
12-200140-003	Spacer	8D-70
12-200142-000	Decal	2D-7
12-200152-003	Knurled Pin	8D-62, 4G-30
12-200162-000	Switch Plate	6D-9
12-200170-000	Flanged Pin	8D-23
12-200800-020	Deck & Stud Assembly	14D-3

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-200808-002	Rubber Deck Chute (#1)	4D-1
12-200808-003	Rubber Deck Chute (#7, 10)	4D-4
12-200808-602	AP Urethane Deck Chute (#1)	4D-1
12-200808-603	AP Urethane Deck Chute (#7, 10)	4D-4
12-200836-600	Urethane Deck Chute (#5)	4D-3
12-200837-000	Rubber Deck Chute (#5)	4D-3
12-200862-000	Pin Deflector	6D-15
12-200863-000	Flanged Bearing	8D-46
12-200864-002	Deck Chute (#1)	4D-1
12-200864-003	Deck Chute (#7, 10)	4D-4
12-200865-000	Plate	8D-28
12-200892-000	R.H. Spotting Finger	6D-3
12-200893-000	L.H. Spotting Finger	6D-4
12-200894-000	Deck Chute (#2, 3, 4, 6, 8, 9)	4D-2
12-200895-000	Deck Chute (#5)	4D-3
12-200896-000	Finishing Washer	8D-56, 10D-31
12-200900-000	Rubber Multi-Position Deck Chute	4D-2
12-200900-600	AP Urethane Multi-Position Deck Chute	4D-2
12-202177-000	Deck Shield Decal	2D-4
12-202188-000	Spacer	12D-16
12-202194-000	Decal (Brunswick "2000")	2D-3
12-230001-006	"X" Washer	8G-7
12-250010-006	X-Washer Pin	4E-36
12-250010-007	X-Washer Pin	4G-8
12-250010-011	X-Washer Pin	2G-24
12-250011-002	Spacer	2E-28, 4E-38
12-250011-003	Spacer	4E-45, 6E-20, 6G-4
12-250011-005	Spacer	8E-5
12-250011-009	Spacer	8E-5
12-250011-011	Spacer	4G-25
12-250011-012	Spacer	4G-23
12-250011-013	Spacer	4G-5
12-250011-014	Spacer	4G-16
12-250011-016	Spacer	8G-11
12-250011-017	Spacer	8G-9
12-250011-019	Spacer	6G-15
12-250011-021	Spacer	6G-27
12-250014-000	Pivot Assembly	4G-15, 12G-20
12-250015-002	Rod	6G-8
12-250016-000	Link Plate	4E-41
12-250020-000	Pivot Assembly	4G-18, 12G-25
12-250021-002	R.H. Rod End	2G-21
12-250021-003	L.H. Rod End	2G-23
12-250022-002	Rod, Rake Crank, Tapered	4G-17
12-250024-002	Rod	6G-16
12-250027-000	Pivot Assembly	6G-17, 12G-29
12-250028-000	Slotted Pivot Assembly	6G-9, 12G-1
12-250029-000	Bell Crank	4G-28
12-250031-002	Rod	2G-22
12-250032-002	Rod	2G-10
12-250039-000	Block	4G-20
12-250040-000	Link	4G-29
12-250044-000	Latch	2G-28
12-250048-000	Rake Lift Arm Assembly	6G-29
12-250049-000	Hook	4G-11
12-250050-000	Spring	2G-29, 4G-49
12-250051-000	Tension Spring	6G-19
12-250052-003	X-Washer Pin	8G-13
12-250052-006	X-Washer Pin	4G-48
12-250053-002	Washer	8G-14
12-250053-004	Washer	4G-25
12-250058-000	Rod End Assembly	6G-3, 12G-3

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-250060-002	Rod End Assembly	2G-7
12-250060-003	Rod End Assembly	2G-12
12-250065-000	Pin	4E-32
12-250066-000	Pin	4G-22
12-250067-000	L.H. Link Assembly	4E-31
12-250068-000	R.H. Link Assembly	4E-31
12-250069-000	Link	4E-30
12-250073-000	L.H. Pit Cushion Arm Assembly	4E-46, 8E-7
12-250074-000	R.H. Pit Cushion Arm Assembly	4E-47, 8E-7
12-250075-000	Sleeve Oilite Bearing	4E-33, 6G-26
12-250076-002	Fiber Washer	4E-8, 6E-19, 6G-5
12-250076-003	Washer	2G-34, 6G-10
12-250077-000	Trip Spring	4E-21
12-250081-000	Trip Rod Assembly	4E-22
12-250085-000	Grease Fitting	4G-21
12-250089-000	Hex Head Socket Cap Screw	4E-26
12-250091-000	Sleeve Oilite Bearing	2G-35, 6G-12
12-250127-000	Tension Spring	2G-26
12-250140-000	Cam Follower Pin	8G-6
12-250141-000	Clamp Washer	8G-15
12-250143-000	Block	8G-17
12-250144-002	Shim 0.030	8G-18
12-250144-003	Shim	8G-18
12-250145-000	Cam Follower Arm Stop	8G-19
12-250152-000	Disc Rod End	4E-5, 6E-7
12-250153-000	Rod End	4E-4, 6E-6
12-250160-000	Rod End & Sleeve Assembly	4E-23
12-250168-000	U-Bolt	4E-17
12-250173-000	"A" Shock Absorber	4E-40
12-250183-004	Spacer	8G-38
12-250183-005	Spacer	6G-15
12-250189-000	Rubber Bushing	2E-29, 4E-34, 6G-25
12-250197-000	Stepped Spacer	4G-12, 6G-21
12-250225-000	Link & Bearing Assembly	4G-19
12-250229-000	Pivot Stud	2G-19, 8G-28
12-250230000	Hub & Bearing Assembly	8G-21
12-250230-000	Hub & Bearing Assembly	2G-15
12-250231-000	Hub Assembly	8G-23
12-250234-000	Cam Follower Arm, for Model A	8G-32
12-250235-000	Cam Follower Arm Assembly	8G-32
12-250242-000	Rake Cam Follower Assembly	8G-4
12-250244-000	Bearing Stud	2G-18, 8G-29
12-250248-000	Sleeve Oilite Bearing	6E-24, 6G-7, 12G-4, 14K-28
12-250257-085	Retainer (Package of 10)	4E-48
12-250265-000	Lever Shoe	2G-25
12-250273-000	Pivot Assembly	4G-15, 12G-40
12-250275-000	Pivot Assembly	4G-18, 12G-27
12-250278-002	Rod, Rake Crank, Tapered	4G-17
12-250286-000	"A" Stamp-On Facing	8E-1
12-250823-000	Hook Assembly	6E-11
12-252000-053	Rod End Assembly	6G-13
12-252005-002	R.H. Mounting Bracket	2E-40
12-252005-003	L.H. Mounting Bracket	2E-40
12-252006-000	"U" Bracket	2E-39
12-252009-000	U-Bolt	2G-6
12-252016-000	Pin Gate Latch Bolt Assembly	4J-15
12-252024-004	Rod	6G-16
12-252029-000	Slotted Pivot	6G-9, 12G-36
12-252037-000	Sweep Arm	2G-4
12-252039-000	Pin Housing	2G-5
12-252048-000	Rake Lift Arm Assembly	6G-29
12-252060-000	Uniball Rod End	2E-14, 6E-28, 6G-1

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-252061-000	Curtain Rod Retainer	6E-3
12-252069-000	Link	2E-3
12-252073-000	Support Arm	2E-35
12-252090-000	Bumper	2G-36, 6G-11, 10L-59
12-252091-000	Bearing	10L-57
12-252092-000	Bumper & Bearing Assembly	6G-12
12-252165-000	Tacking Board	8E-10
12-252173-000	"A-2" Shock Absorber	2E-27
12-252234-000	Cam Follower Arm, for Model A-2	2G-16, 8G-24
12-252235-000	Cam Follower Arm Assembly	2G-13, 8G-24
12-252268-000	R.H. Curtain Rod Bracket	6E-2
12-252269-000	L.H. Curtain Rod Bracket	6E-2
12-252284-000	Cushion	2G-3, 14G-6
12-252290-000	"Astroline" Rake Board Decal	2G-1, 14G-9
12-252290-010	"2000" Rake Board Decal	2G-1, 14G-9
12-252295-000	L.H. End Plate	4G-50
12-252301-000	Rake Latch Assembly	2G-20
12-252308-000	"A-2" Pit Cushion Facing	8E-15
12-252309-000	Collapsible Rake Crank Rod - Straight	4G-17
12-252310-000	Strap-On Facing for A-2 & Jetblack	8E-15
12-252338-000	Shock Absorber Assembly	6G-24
12-252338-003	Mounting Rod End	6G-44
12-252339-000	Spacer	2G-31
12-252341-002	Cushion Mount & Bracket Assembly	2E-7
12-252342-000	Rubber Spacer	6G-38
12-252344-000	Cushion Bracket	2E-30
12-252346-000	Tube	2E-21
12-252348-000	Elevator Plate	2E-49, 4H-34, 12H-28
12-252349-000	Follower Spacer	2E-17
12-252350-000	Bushing	2E-2
12-252351-000	Roller	2E-19
12-252352-000	Cushion Arm Bolt	2E-1
12-252359-000	Link Plate	6E-18, 6G-6
12-252360-000	D-Washer	2E-4
12-252361-000	Bracket	6G-22
12-252362-000	Rake Lowering Stop	10K-7
12-252364-002	Tube	2E-10, 6E-26, 6G-2
12-252364-003	Tube	6E-23, 6G-8
12-252365-000	Rod End, for Model A-2	6E-21, 6G-3, 12G-31
12-252372-000	Gray Rake Board Cushion	2G-3, 14G-4
12-252372-010	Brown Rake Board Cushion	2G-3, 14G-4
12-252373-000	Gray Rake Board W/O Decal	2G-2, 14G-1
12-252373-010	Brown Rake Board W/O Decal	2G-2, 14G-1
12-252374-000	Gray Rake Board Assembly	14G-2
12-252374-010	Brown Rake Board Assembly	14G-2
12-252377-000	Ball Wipe - Complete	2L-17
12-252548-000	Gray Rake Board (5.5")	2G-2, 14G-3
12-252548-010	Rake Board - Brown Kickbacks (5.5")	2G-2, 14G-3
12-300013-002	Spacer	4F-10
12-300016-002	Washer	4F-14
12-300024-002	Rear Tie Plate	2F-22
12-300024-003	Front Tie Plate	2F-22
12-300071-000	Pulley Assembly	2F-5
12-300073-000	Pulley Assembly	2F-10
12-300075-000	Idler Pulley Assembly	4F-16
12-300076-000	Front Pier	2F-23
12-300077-000	Rear Pier	2F-23
12-300081-004	Flat Washer	2F-43, 4F-23
12-300082-003	Pit Conveyor V-Belt	2N-2
12-300088-000	Pulley Assembly	4F-11, 6F-9
12-300093-002	Elevator Bolt	8F-11
12-300093-003	Bolt	8F-15

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-300093-004	Elevator Bolt	8F-11
12-300093-005	Elevator Bolt	8F-11
12-300103-000	Pit Rug	6F-13, 8F-7
12-300104-000	Hex Head Socket Cap Screw	10F-24
12-300107-002	Carriage Bolt	6F-4
12-300107-003	Bolt	6F-5
12-300108-000	Arm & Bearing Assembly	2F-19
12-300109-000	Shaft	4F-17
12-300110-000	Pit Sub Mounting Plate	6F-2
12-300126-000	Oscillating Vibrator Shaft - Painted	2F-41
12-300131-000	Frame Assembly	2F-34, 6F-16, 10F-18
12-300141-000	Vibrator Shaft	2F-41, 4F-22, 6F-15
12-300146-002	Rubber Strip (46")	8F-3
12-300146-004	Rubber Strip (17")	8F-6
12-300147-000	Washer	2F-4
12-300148-000	Spacer	2F-6
12-300149-000	Shaft	2F-8
12-300160-000	Bearing & House Assembly	4F-4, 6F-11
12-300160-003	Bearing	2F-38, 6F-16
12-300162-000	Impact Cushion	8F-10
12-300163-000	Jogger Link	4F-9
12-300168-000	R.H. Clamp & Pin Assembly	10F-21
12-300169-000	L.H. Clamp & Pin Assembly	10F-21
12-300170-000	Spring Guide	10F-11
12-300172-000	Compression Spring	10F-14
12-300178-000	Pivot	10F-16
12-300180-000	Rubber Strip	8F-2
12-300189-000	Step Washer	10F-15
12-300192-000	R.H. Lever & Bracket	10F-17
12-300193-000	L.H. Lever & Bracket	10F-17
12-300194-000	Jogger Link Assembly	2F-1, 4F-9, 6F-10
12-300201-000	Jogger Link (for Counter weight Fly wheel)	4F-9
12-300203-000	Pulley Arm	2F-9
12-300205-002	Rubber Block (3" x 1-1/2" x 5/8")	8F-9
12-300205-003	Rubber Block (3" x 1-1/2" x 1/4")	8F-9
12-300207-000	L.H. Deflector Assembly	8F-14
12-300208-000	R.H. Deflector Assembly	8F-14
12-300212-000	Rubber Block & Bracket	8F-1
12-300224-000	Pivot Post	10F-9
12-300240-000	Torsional Pier Front	2F-25
12-300241-000	Rear Mount Assembly	2F-25
12-302003-000	Pit Conveyor Drive Guard	6P-1
12-302212-000	Pit Board Bumper	10F-20
12-350001-000	Strip	2K-13, 6K-27
12-350009-000	Bearing Stud	10D-21, 2K-7, 6K-21
12-350010-000	Bearing Stud	10G-21, 4K-24
12-350011-000	Bearing Stud	10G-29, 4K-28
12-350022-000	Stop	2K-1, 6K-15
12-350023-002	Pin	10G-20, 4K-5
12-350029-000	Moving Deck Pulley	10D-12, 14K-10
12-350030-000	Moving Deck Pulley	10D-14, 14K-12
12-350032-000	Pulley Shaft	10D-24, 14K-22
12-350033-000	Scissor Pulley Assembly	10D-13, 14K-13
12-350035-000	Shaft	10D-19, 6K-8
12-350109-000	Deck Lift Arm End	16K-6
12-350111-002	Shim (.010)	6K-10
12-350111-003	Shim (.020)	6K-11
12-350116-000	R.H. Foot Guard	2K-19, 4P-6
12-350117-000	L.H. Foot Guard	6K-13, 4P-6
12-350118-002	Shim (.030)	10G-30, 2K-25, 4K-25
12-350118-003	Shim (.060)	10G-15, 2K-25, 4K-25
12-350118-004	Shim (.030)	10G-22, 2K-22, 4K-26

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-350118-005	Shim (.060)	10G-22, 4K-26
12-350120-000	Bushing	10G-10, 4K-10
12-350122-002	Rod	12K-10
12-350122-003	R.H. Rod End	12K-9
12-350122-004	L.H. Rod End	12K-8
12-350122-005	Retaining Ring	12D-3, 10K-9, 12K-7
12-350123-000	Bushing (9/16")	10G-10, 4K-10
12-350126-000	Compression Spring	10G-13, 4K-7
12-350128-000	Washer	12D-4, 10K-20, 12K-15
12-350129-000	Spacer	14K-9
12-350131-000	Channel	10G-11, 2K-26, 4K-30
12-350147-000	Plate	2K-15, 6K-29
12-350163-002	Spring Guide Tube Cap	10G-3, 4K-12
12-350163-003	Spring Guide Tube Cap	4K-13
12-350164-002	Washer	10G-5, 4K-15
12-350164-003	Washer	10G-5, 4K-15
12-350165-000	Bushing (3/4")	10G-10, 4K-10
12-350166-000	Shaft	10D-19, 6K-8
12-350167-000	Nut Retainer	10G-6, 4K-18, 8L-41
12-350170-000	Outside Spring Guide Tube	10G-4, 4K-14
12-350171-000	Inside Spring Guide Tube	10G-4, 4K-14
12-350178-000	Bracket	6K-22, 16K-11
12-350182-000	Bolt	8K-16
12-350184-000	Pivot	8K-3
12-350217-000	Stabilizer Assembly	12D-18, 12K-5
12-350802-000	Deck Hook Assembly	14B-24, 14K-18
12-350802-600	Advanced Performance Deck Hook Assembly	14K-18
12-350802-600	Advanced Performance Deck Holding Assembly	14B-24
12-350803-000	Deck Hook	14B-24, 14K-17
12-350803-600	Advanced Performance Deck Hook	14K-17
12-350803-600	Advanced Performance Deck Holding Hook	14B-24
12-350804-000	Deck Hook Hub	14K-16
12-350804-600	Advanced Performance Deck Hook Hub	14K-16
12-350821-000	Deck Lift Shaft Assembly	10G-17
12-352022-000	Rake Stop	2K-1, 6K-15, 10K-4
12-352303-000	Cap	10K-13, 12K-32
12-352308-000	Wedge	10K-17, 12K-25
12-352319-000	L.H. Rear Foot Assembly	10K-14
12-352320-000	R.H. Rear Foot Assembly	12K-3
12-352566-000	Bracket	6L-37
12-400018-002	Spacer	12H-1, 20H-5
12-400018-004	Spacer	4H-8
12-400018-005	Spacer	8H-12
12-400018-006	Spacer	4H-51, 12H-2, 2P-16, 4P-14
12-400018-007	Spacer	12H-3, 20H-21
12-400018-008	Spacer	12H-4, 2J-13
12-400018-011	Spacer	4H-3
12-400018-015	Spacer	4H-11
12-400018-016	Spacer	12H-6, 18H-23
12-400018-017	Spacer	12H-8, 18H-25
12-400018-019	Spacer	4H-11
12-400018-021	Spacer	4H-9
12-400018-022	Spacer	4H-1
12-400018-023	Spacer	12H-7, 18H-16
12-400018-024	Spacer	4H-47, 12H-77, 2P-22
12-400018-025	Spacer	12H-88
12-400022-000	U-Bolt	2J-8
12-400027-000	Idler Arm Stud	12H-13, 18H-5
12-400030-000	Bearing Bushing	12H-14, 18H-12
12-400031-002	Spring Post	12H-15, 18H-10
12-400031-003	Spring Post	12H-16, 18H-18
12-400031-004	Post	12H-17

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-400031-005	Post	12H-18
12-400033-000	Bearing Retainer	4F-3, 12H-19, 20H-9
12-400034-002	Motor to Gear Box Belt	2N-1
12-400034-003	Motor to Elevator Belt	2N-2
12-400034-004	Cross Drove V-Belt	2N-3
12-400034-005	Pin Wheel V-Belt	2N-4
12-400034-007	Cross Conveyor Drive Belt	2N-6
12-400035-003	Sheave	12H-21, 20H-8
12-400035-004	Sheave	12H-20, 20H-4
12-400035-005	Sheave	12H-21, 20H-8
12-400035-006	Sheave	12H-22, 20H-14
12-400035-008	Sheave	12H-23, 20H-23
12-400035-009	Sheave	12H-24, 20H-26
12-400035-012	Sheave (3.80" O.D.)	12H-113
12-400036-000	Bushing	12H-25, 18H-28
12-400040-000	Tension Spring	16H-3, 18H-22
12-400042-000	Tension Spring	16H-5, 18H-4
12-400046-000	Rear Guard Assembly	12H-26, 2P-5
12-400048-005	Rod Cover (90" Tan)	2H-30, 14H-24
12-400048-091	Gum Rubber Ball Rod Cover (50' Tan)	2H-30, 14H-24
12-400051-000	Ball Lift Stud (Model A)	2H-8
12-400053-000	Ball Lift Pin	2H-13
12-400055-000	Wiper & Spring Assembly	4H-22
12-400055-003	Spring Only	4H-21
12-400055-005	Plate	4H-20
12-400058-000	Plate	4H-25
12-400059-000	Tension Lever Assembly	2J-2
12-400068-000	Bumper	12H-29
12-400071-000	Pin Wiper Leaf Spring	4H-26
12-400081-000	Motor Pulley, A Machine 5.25	2J-15
12-400096-000	Clamp, Model A	2H-17
12-400097-000	L.H. Guide Roll Arm	4H-10, 8H-13
12-400098-000	R.H. Guide Roll Arm	4H-28, 8H-19
12-400100-000	Button, Pinwheel	6H-6
12-400101-000	Mount	2J-1
12-400104-000	Modular Pinwheel Segment	6H-7
12-400123-000	Rubber Bumper	2H-3
12-400126-000	Pinwheel Drive Wheel Assembly	12H-43, 20H-18
12-400131-000	Spacer	2J-11
12-400136-000	Plug	12H-27, 2P-4
12-400138-002	Square Key	12H-47, 20H-13
12-400138-003	Key	12H-48, 20H-7
12-400138-004	Key	12H-49, 20H-24
12-400138-006	Key	12H-50, 20H-17
12-400138-007	Square Key	12H-114
12-400138-008	Rectangular Key	12H-115
12-400139-003	Washer	12H-51, 20H-3
12-400139-004	Washer	2H-2
12-400139-005	Special Washer	12H-123, 20H-22
12-400139-006	Washer	8H-6
12-400149-000	Shaft	2H-23, 14H-3
12-400183-000	Rubber Cord	6H-3
12-400191-000	Special Washer	8H-3
12-400193-000	Spring Rod	2H-7
12-400194-000	Tension Spring	16H-4, 18H-31
12-400199-000	Flanged Oilite Bearing	2H-22
12-400209-000	Idler Pulley Assembly	12H-45, 18H-29, 2J-10
12-400210-000	Step Bolt	16H-13
12-400216-000	Ball Wheel Guard Assembly	16H-17, 2P-2
12-400219-000	Idler Pulley Assembly	8C-40, 2C-2, 12H-30, 2J-3
12-400221-000	Idler Pulley Assembly	12H-31, 18H-29, 2J-4
12-400223-000	Long Turret Drive V-Belt	2N-7

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-400225-000	Pin Wiper Shim	4H-27
12-400227-000	Ball Wheel V-Belt	2N-1
12-400230-000	Plate	2J-16
12-400240-000	L.H. Ball Wheel Roller	8H-4, 10H-6
12-400241-000	Spacer	2F-30
12-400247-002	Pulley Arm Bushing	2F-27
12-400247-003	Pulley Arm Bushing	2F-28
12-400251-000	Rubber Cord	6H-5
12-400252-000	Torsion Spring	12H-9, 18H-26
12-400254-000	Arm & Bearing Assembly	12H-12, 18H-17
12-400256-000	Shaft	8H-5
12-400257-000	Flange	10H-2
12-400262-000	Flange	10H-7
12-400263-000	Pin Wheel Roller Assembly	4H-2, 8H-34, 10H-21
12-400265-000	Flange - (Upper Pinwheel Guide Roller)	10H-19
12-400266-000	Guide Roller Assembly - (Upper Pinwheel)	4H-7, 10H-20
12-400268-000	Ballwheel Roller Assembly	8H-25, 10H-9
12-400269-000	Flange	10H-14
12-400271-000	Hub & Tire - Upper Ballwheel Guide Roller	10H-12
12-400272-000	Ballwheel Guide Roller Assembly	8H-11, 10H-15
12-400273-000	Carriage Bolt (1/2-13 x 1-1/4")	12H-93
12-400279-000	Ballwheel V-Belt	2N-1
12-400279-003	V-Belt Fastener (Pkg. Of 10)	2N-9
12-400281-000	Collar	12H-5, 18H-6
12-400284-000	Pin Wheel Roller Bolt	4H-4
12-400285-000	U-Bolt	4H-18, 8H-18
12-400286-000	Spring	2F-14
12-400288-000	Ball Lift Arm Assembly	2H-20
12-400289-000	Spacer	2H-21
12-400291-000	Staright Spacer	8H-23
12-400293-002	Spacer	8H-22
12-400293-003	Spacer	8H-24
12-400294-000	Tapered Spacer	8H-23
12-400297-000	Idler Pulley Assembly	12H-40, 18H-11
12-400300-000	Collar	2H-9
12-400302-000	Idler Pulley Bracket	12H-46, 2J-14
12-400311-000	Pulley Arm	2J-12
12-400314-000	Turret Drive V-Belt	2N-7
12-400316-000	Bearing Housing	12H-108
12-400317-002	Gear	12H-100
12-400317-003	Pinion	12H-122
12-400318-000	Washer	12H-121
12-400319-000	Spacer	12H-112
12-400320-000	Shaft	12H-107
12-400321-000	Spacer	12H-103
12-400322-000	Adjusting Nut	12H-101
12-400323-000	Special Washer	12H-99
12-400324-000	Shield Assembly	12H-124, 2P-8
12-400328-000	Bracket	4H-32
12-400329-000	V-Belt	2N-1
12-400335-000	Spacer	6H-11
12-400639-000	Bracket	4H-33
12-400803-000	Spring Rod Bushing	2H-4
12-400804-000	Collar	12H-53, 20H-20
12-400805-000	Rear Plate & Pad	14H-1
12-400806-002	Spring	16H-29, 2J-19
12-400806-003	Spring Hook	16H-29, 2J-20
12-400807-000	Rear Plate Pad	14H-2
12-400810-000	Drive Shaft	12H-11, 20H-12
12-400837-000	L.H. Wheel Guard Assembly	12H-32
12-400838-000	R.H. Wheel Guard Assembly	12H-39
12-400848-000	Shaft	2H-13

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-402039-000	Step Bar	4H-35, 2P-2
12-402042-000	Top Front Rod Cover	2H-27
12-402043-000	Top Rear Rod Cover	2H-26
12-402051-000	Ball Lift Stud (Model A-2)	2H-8
12-402053-000	Retaining Washer	2H-18
12-402054-000	Spacer	2H-19
12-402059-000	Tension Lever Assembly	2J-2
12-402072-000	R.H. Bracket (Steel Catwalk)	16H-23
12-402073-000	L.H. Bracket (Steel Catwalk)	16H-24
12-402074-000	Motor Pulley Guard	4P-5
12-402076-000	Handle	16H-1
12-402081-000	Motor Pulley, A-2 (60 cycle) 7.75	2J-15
12-402093-000	Sleeve	2H-37
12-402094-000	Spacer	2H-35
12-402095-000	Thrust Washer	2H-36
12-402096-000	Clamp, Model A-2	2H-17
12-402104-000	Bearing Shaft	4H-45
12-402105-000	Spacer	4H-46
12-402107-000	Flange	4H-42
12-402109-000	Guard - Pinwheel Guide Roller	4H-40
12-402110-000	Arm	4H-36
12-402121-000	Compression Spring	2H-5
12-402126-000	Pin Wheel Drive Pulley	12H-43, 20H-18
12-402155-000	Pin Wheel Guard	6P-2
12-402156-000	Pin Wheel Guide Guard	6P-5
12-402280-000	Motor Mount Shaft Assembly	2J-5
12-402350-000	Motor Mount Shaft Assembly	2J-5
12-402401-000	Bracket Assembly	14H-4
12-402405-000	Rear Pin Deflector	14H-5, 6P-3
12-402413-000	Pin Deflector	12H-33
12-402422-000	Pin Wheel Brake	12H-94, 18H-24
12-402425-000	Support Brace	2H-25, 14H-11, 10L-60
12-402429-000	Hook	12H-96, 14H-26
12-402432-000	Bottom Front Rod Cover	2H-14
12-402434-000	Nylon Turn Pan Cam	6J-18
12-402436-000	Ball Track Mounting Plate	10L-56
12-402437-000	Support Brace	18H-37
12-402441-000	Bearing Bushing	18H-34
12-402442-000	Idler Pulley Assembly	18H-39
12-402443-000	Idler Pulley Assembly	18H-42
12-402445-000	Spacer	18H-40
12-403081-000	Motor Pulley Assembly	16A-11
12-450002-000	Bracket	6J-12
12-450003-000	Shaft	6J-6
12-450004-000	Pulley	6J-19
12-450005-000	Tension Spring	6J-7
12-450006-002	X-Washer Pin	4J-20
12-450006-003	X-Washer Pin	4J-49
12-450008-000	Tension Spring	4J-37
12-450012-000	Bushing	4J-5
12-450015-000	Lever Assembly	4J-2
12-450017-000	Pin Gate Assembly	4J-17
12-450023-003	Bumper	4J-26
12-450026-004	Spacer	4J-3
12-450027-000	Spring Seat	4J-27
12-450028-000	Compression Spring	4J-29
12-450032-000	Latch Assembly	4J-16
12-450033-000	Pulley	6J-1
12-450034-000	Cross Conveyor Pulley	4J-10
12-450035-000	Idler Pulley	4J-4
12-450037-000	Cross Conveyor Belt	2N-5
12-450038-000	Rubber Mount	6J-10

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-450039-000	Spacer	6J-9
12-450040-000	Pin Rest	6J-20
12-450043-008	Shaft	4J-34
12-450044-000	Turn Around Pan Assembly	6J-17
12-450045-003	Spring Wheel	4J-13
12-450048-000	J-Bolt	6J-13
12-450051-000	Tension Spring	20B-21
12-450052-002	Key	6J-5
12-450052-003	Key	6J-8
12-450053-000	Shaft	6J-28
12-450056-000	Wheel	6J-23
12-450057-000	Bracket	6J-24
12-450059-000	Bumper	6J-45
12-450061-000	Tension Spring	4J-18
12-450063-000	Shoulder Bolt	4J-12
12-450064-000	Roller	4J-14
12-450075-000	Snubber Assembly	4J-19
12-450079-000	Tension Spring	4J-22, 6J-32
12-450080-000	Rubber Spacer	4J-23
12-450081-000	Cross Conveyor Belt Guard	6P-4
12-450090-000	Cross Conveyor Idler Pulley	6J-29
12-502100-000	Switch Track Assembly	8L-4, 10L-7
12-502105-000	Ball Track Assembly (Curved)	10L-1
12-502114-000	Tension Spring	10L-44
12-502115-000	Ball Track Assembly	10L-22
12-502131-000	Y Switch Stop Bar	8L-6, 10L-9
12-502132-000	Rod	10L-8
12-502133-000	Ball Trip	10L-16
12-502134-000	Y-Switch Shaft	8L-2
12-502136-000	Hook	10L-27
12-502137-000	Spring Post	10L-65
12-502138-000	Ball Stop Bracket	10L-69
12-502139-000	L.H. Track Brace	10L-23
12-502140-000	R.H. Track Brace	10L-5
12-502142-000	Trip Rod	10L-21
12-502143-000	Rod	10L-12
12-502145-000	Washer	10L-30
12-502150-000	Pivot Bracket	10L-38
12-502151-000	Block	10L-37
12-502152-000	Bracket	10L-45
12-502153-000	Stop	10L-35
12-502154-000	Y-Switch Bumper (Pull-Thru)	8L-11
12-502155-000	Y-Switch Spacer	8L-9
12-502156-000	Plate	8L-19
12-502157-002	Shim	8L-5
12-502157-003	Shim	8L-5
12-502157-004	Shim	8L-5
12-502159-000	Y-Switch Assembly	8L-12
12-502162-000	Fence Assembly	10L-24
12-502166-000	Stop Bracket	8L-21
12-502167-000	Tension Spring	10L-28
12-502171-000	U-Bolt	14H-22
12-502172-000	Ball Guide Rod	14H-23
12-502183-000	Rear Stop	8L-40
12-502187-000	Torsion Spring	8L-37
12-502192-000	"Y" Switch	8L-24
12-502194-000	Spring Washer	8L-26
12-502195-000	Thrust Bearing	8L-28
12-502196-000	Pivot Shaft	8L-32
12-502199-000	Clutch Plate Assembly	8L-27
12-502301-000	Accelerator Frame	2L-25, 4L-6
12-502303-000	Pulley Support Bracket	2L-4

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-502304-000	Track Support	2L-50
12-502305-000	Track Support	2L-46
12-502308-000	Motor Plate	4L-21
12-502313-000	Front Support Bracket	2L-40
12-502319-000	Brush	2L-11
12-502320-000	Ball Track (Pan)	2L-16
12-502320-600	Advanced Performance Ball Accelerator Pan	2L-16
12-502328-000	Plate Assembly	8L-10
12-502331-000	Spring	2L-52
12-502335-000	Control Box Assembly	4L-9, 6L-24
12-502336-010	Control Box	4L-9, 6L-24
12-502337-000	Cable Assembly	4L-7
12-502338-000	Belt Shield	4L-3, 2P-10
12-502340-000	Brush Clip Shaft	2L-8
12-502341-000	Channel Nut	2L-54
12-502343-000	Spring Retainer	2L-53
12-502345-000	Bumper Screw	2L-55
12-502346-000	Bushing	2L-12
12-502349-600	High Crown Pulley	2L-5
12-502353-000	Shaft	2L-30
12-502410-000	Motor Pulley, Jet Back 6.25	2J-15
12-502418-000	Channel Deck Shield	2D-6
12-502424-000	Duster Pad	2L-27, 4L-25
12-502442-000	Ball Duster Frame	6L-2
12-502458-000	Adjusting Bracket	2L-21
12-502602-000	Booster Frame	6L-16
12-502611-000	Drive Shaft	6L-12
12-502613-000	Hub	6L-8
12-502XXX-000	Motor Pulley (see chart on previous page)	4L-19
12-503138-000	Ball Stop Bracket	10L-26
12-50318-000	Brush Clip	2L-10
12-700101-000	Lever	4M-10
12-700103-000	Lever	4M-10
12-700206-000	Warning Label	2P-6
12-700804-000	"U" Bracket	2P-13
12-700822-000	Large Guard Assembly	4P-1
12-750031-000	Box Mounting Receptacle	6M-18
12-750032-000	Box Mounting Receptacle	6M-20
12-750033-000	Box Mounting Receptacle	4L-13, 6L-22, 6M-27
12-750071-000	Twist Lock Plug	12H-55
12-750079-000	Selenium Rectifier	6M-17
12-750173-000	Heater Element	6M-9
12-750179-000	Fuse Receptacle	6M-25
12-750180-000	Fustat	6M-22
12-750181-000	Fuse Cover	6M-24
12-750198-000	Signal System Receptacle	6M-26
12-750255-000	Link	2M-17
12-750337-000	Latch Assembly	20B-22
12-750339-000	Pin	20B-29
12-750344-000	Pivot Assembly	20B-32
12-750362-000	Switch	20B-24
12-750369-000	Clip	20B-27
12-750523-000	Small Guard Assembly	2P-23
12-750526-000	Support	4P-13
12-750570-000	Rear Rake Crank Guard	4P-2
12-750571-000	Rake Crank Guard	4P-4
12-750798-000	Brace	2M-18
12-750799-000	Pin Light support	2M-19, 4P-8
12-750983-000	Cord Assembly	2M-4
12-750985-000	Channel Assembly	2M-11
12-750986-000	Pin Light Reflector	2M-10
12-750992-000	40 Watt Pin Lamp (48" T-12)	2M-5

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-750994-000	Ballast (115 Volt)	2M-2
12-750997-000	Foot Guard Extrusion	2P-9
12-750998-000	U-Bolt	10K-32, 2P-29
12-750999-000	Bracket	10K-30, 2P-24
12-752005-000	Spring	4M-9
12-752008-000	Lever	4M-10
12-752015-000	Clip	6G-28
12-752020-000	Washer	10K-25
12-752056-000	Pinsetter Motor (115/230V 50/60 Hz)	2J-17
12-752396-000	Rake Down Switch	2M-27
12-752401-000	Safety Lockout Harness	2M-29
12-752402-000	Ball Detect Cable Assembly	2M-25
12-752403-000	Scorer Wire Harness Assembly	2M-28
12-752523-000	Small Guard	2P-1
12-752574-000	Motor Pulley Guard	4P-5
12-752997-000	Guard	10K-29
12-802059-003	Motor (1/4 hp 1425-1725 RPM)	4L-27, 6L-3
12-802059-004	Accelerator Motor(1/2 hp 2850-3450 RPM)	4L-27
12-860064-000	Deck Lift Crank Eccentric Assembly & Hardware	20A-5
12-860065-000	Gear Box Cover Assembly	20A-2
12-860071-000	A2 Modular Pin Whell with hardware	6H-7
12-860117-000	L.H. Bracket	20C-8
12-860118-000	R.H. Bracket (Steel Catwalk)	20C-8
12-860119-000	Center Chute Repair Kit	20C-8
12-860171-000	60:1 Worm Shaft	10A-1, 12A-1, 14A-1
12-860200-000	Foot Guard Package	2P-9
12-860205-000	Switch Assembly	4M-2
12-860206-000	Switch Shipping Assembly	4M-15
12-860228-600	Advanced Performance Turret Clamp Plates Kit	24C-10, 24C-13
12-860229-600	Advanced Performance Ball Spinning/Jam Eliminator Kit	14H-13
12-860563-000	Microswitch Assembly	4M-1
12-860570-000	Non-Pinfinder Deck Pads (Pkg. of 10)	6D-10
12-860571-000	Pinfinder Deck Pads (Pkg. of 10)	6D-10
12-860578-000	Rake Cam Conversion Kit	28A-5, 34A-1
12-860579-000	Ball Lift Rod Assembly, for Model A	2H-31
12-860581-000	Bearing Ring Set	22C-2
12-860583-000	Spinning Ball Eliminator	14H-13
12-860583-002	Pivot Spacer	14H-14
12-860583-003	Arm Cover SBE	14H-24
12-860583-004	Mounting Plate Assembly	14H-16
12-860603-000	Worm Shaft Oil Leak Repair Kit	10A-22
12-860607-000	Rake Shaft Repair Kit	6G-42
12-860613-000	Clutch Drive Disc	10A-13, 14A-13
12-860620-002	Fiberglass Pit Board Only	6F-14
12-860620-003	Fiberglass Pit Board Assembly	6F-14
12-860620-004	Wood Pit Board Assembly	8F-8
12-860620-005	Wood Pit Board Only (1/2" 7 Ply)	8F-8
12-860621-000	Contractor - Relay Kit	6M-5
12-860624-000	Rear Pit Frame Conversion Kit	10F-23
12-860626-000	Clutch Drive Disc	10A-15, 14A-15
12-860627-000	Circuit Breaker & Bracket	6M-11
12-860630-000	Clutch Pulley Assembly	10A-14, 14A-21
12-860641-000	Pulley Arm Shaft Assembly	2F-8
12-860659-000	Pit Frame Assembly	6F-8, 10F-19
12-860662-000	Ball Wheel	8H-1
12-860665-000	Rake Shaft Repair Kit	6G-43
12-860716-000	Clutch Bearing Assembly	10A-14, 14A-14
12-860717-000	Clutch Pulley Assembly	10A-14, 14A-14
12-860719-000	27:1 Worm Shaft	16A-7
12-860722-000	27:1 Worm Shaft (1 Pkg.)	10A-1, 12A-1, 14A-1, 16A-9
12-860725-000	Pit Carpet Cover (1 Ea.)	6F-12
12-860805-000	Turret Clutch Facing Kit	16C-30

<b><u>PARTNUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
12-860808-000	Heavy Duty Pin Gate Strap	8C-10, 2C-10, 4J-31
12-862015-000	Rod End Conversion Kit	2E-47
12-862037-002	Grey Deck Shield Assembly	2D-2, 14D-21
12-862037-010	Brown Deck Shield Assembly	2D-1, 14D-21
12-862042-000	Duster Cloth (Pkg. of 3)	2L-26
12-862064-000	Guard Assembly - Double Outside	20A-5
12-862111-000	Motor Contactor	6M-5
12-862113-000	Turret Pin Guide Wire	24C-16
12-862116-000	Turret Pin Guide	24C-1
12-862117-000	Moving Deck Assembly	6D-11, 10D-1
12-862138-000	Clutch Lever Support Kit	8A-19
12-862155-000	Step Bar & Hardware	2P-2
12-862163-000	Magnetic Clutch Assembly	12H-41, 20H-15
12-862165-000	Transformer	6M-1
12-862167-000	Rubber Pit Curtain	4E-14, 6E-10
12-862171-000	Ball Bearing	8C-6, 2C-6
12-862180-000	Support Arm Assembly	14H-9, 10L-62
12-862185-000	Deck Lift Crank	24A-20, 26A-37
12-862186-000	Modular Rake Shaft Assembly	4G-1
12-862578-000	Pit Cushion	4E-1, 8E-14
12-862579-000	"A-2" Ball Lift Rod Assembly	2H-31
12-862580-000	Cushion Arm Rebuilding Kit	2E-48
12-862581-000	Deck Lift Shaft Assembly	10D-23, 2K-8, 6K-9, 16K-5
12-862823-000	Ball Guide Roller Assembly	4H-41, 8H-10
12-862827-000	Motor Start Relay, 3 pole	4M-14, 6M-7
12-862828-000	Relay	6M-8
12-862829-000	Motor Start Relay, 2 pole	4M-14, 6M-7
12-862830-000	Relay	4L-14, 6L-26
12-862839-000	Cushion Mount & Bearing	8E-16
12-862861-000	Gear Box Input Rebuilt Kit	12A-8
12-862863-003	Rake Crank Assembly	20A-4
12-862864-003	Clutch Face Kit	10A-19
12-862864-004	Clutch Face Kit	10A-21
12-862864-005	Advanced Performance Clutch Face Disc	10A-21
12-862866-000	Ball Lift Arm Rebuild Kit	2H-32
12-862867-000	Clutch Release Link	6A-24
12-862874-000	Turret Ring Bearing Assembly	20C-17, 22C-10
12-862890-000	Time Delay Module (Solid State)	6M-10
12-862918-400	Universal Trigger PC Board Assembly	2M-23
17-600702-000	Dual Reflector Assembly	2M-24
22-195014-001	Lockwasher (1/4)	12C-41
24-200947-000	Flat Drive Belt	6N-1
29-088557-000	Wiper Frame Assembly	6L-2
29-088559-000	Assembly	6L-2
29-203256-000	Frame Holder	6L-2
34-082132-000	Rubber Roller Assembly	10L-25
53-100247-000	Mercury Switch Assembly	10L-75
53-100248-000	Clip	10L-74
53-520025-000	Idler Sheave Only	18H-9
53-520148-002	Poly V-Belt	6N-1
53-520235-600	High Friction Poly-V Belt	6N-1
53-530060-000	Rubber Hub and Tire Assembly	6L-10
57-214904-000	Photo Cell & Cable Assembly	2M-26
61-860028-000	E-Z Ball Duster Apron	6L-1
90-150182-000	Pin Guide Wire Pad	24C-5
90-150303-000	Delrin Turret Stop Roller	8C-17, 2C-17
90-200114-000	Urethane Deck Roller	8D-39
90-200114-600	A-2 Pinsetter Urethane Deck Bumper AP	8D-74
90-200892-000	R.H. Nylon Spotting Finger	6D-3
90-200893-000	L.H. Nylon Spotting Finger	6D-4
90-252037-000	Molded Sweep Arm Assembly	2G-4, 4G-32
90-300076-000	Front Pit Mount - Urethane	2F-24

<b><u>PART NUMBER</u></b>	<b><u>DESCRIPTION</u></b>	<b><u>PAGES - INDEX</u></b>
90-300077-000	Rear Pit Mount - Urethane	2F-24
90-400048-000	Heavy-Duty Ball Lift Rod Cover (50' Red)	2H-30, 14H-24
90-400048-005	Ball Rod Cover (18")	2H-30
90-400048-600	Advanced Performance Urethane Foam Rod Cover (3 per pack)	14H-24
90-400048-600	AP Urethane Foam B/L Rod Cover (Pkg. Of 3)	2H-30
90-400123-000	Spring Rod Bushing	2H-3
90-400258-000	L.H. Ball Wheel Roller	10H-5
90-400260-000	R.H. Ball Wheel Roller	10H-8
90-400261-000	Hub & Tire - Lower Pin Wheel	10H-10
90-400264-000	Pin Wheel Guide Roller	10H-18
90-400272-000	Ball Wheel Guide Roller	8H-11, 10H-16
90-400803-000	Delrin Spring Bushing	2H-4
90-400840-000	Universal Ballwheel Guard	12H-32
90-402108-000	Ball Wheel Guide Roller	4H-43
90-502153-000	Nylon Y-Switch	8L-12
90-520060-000	Urethane Ball Wheel Assembly	6L-10
90-675000-000	Black Rubber Pit Mount	2F-20, 2L-44